C411 (BK)

13A576

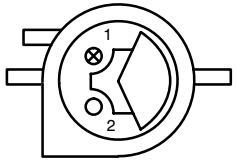

F02046

15K867

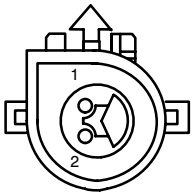

F02489

(1) –

(2) 43 (DB)

C413 (GY)

14A005

Turn lamp, left rear

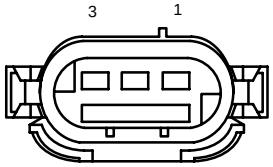

F03099

Pin	Circuit	Circuit function
1	1455 (GY/RD)	relay control battery feed
2	–	not used
3	1369 (WH/OG)	Switched ground

C416 (GY)

Turn lamp, right rear

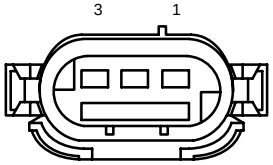

F03099

Pin	Circuit	Circuit function
1	1457 (RD/YE)	relay control battery feed
2	–	not used
3	1361 (RD/PK)	Switched ground

C418 (BK)

14A005

Park/stop lamp, right rear

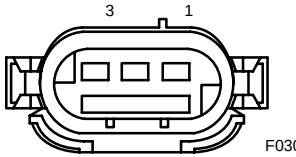

F03099

Pin	Circuit	Circuit function
1	1455 (GY/RD)	relay control battery feed
2	1366 (TN/RD)	Switched ground, Park lamps
3	1365 (GY/LB)	Switched ground, Stoplamps

C419 (BK)

14A005

Park/stop lamp, left rear

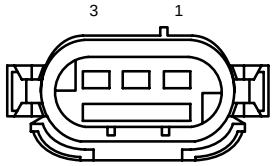

F03099

Pin	Circuit	Circuit function
1	1457 (RD/YE)	relay control battery feed
2	1364 (DB/YE)	Switched ground, Park lamps
3	1363 (WH/RD)	Switched ground, Stoplamps