C207

14401

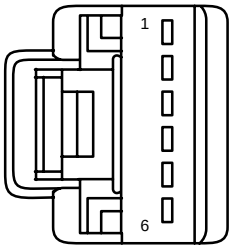

F06179

Pin	Circuit	Circuit function
1	31S-AA69 (BK/WH)	Ground, Switched
2	31-AA68 (BK/OG)	Ground
3	–	not used
4	–	not used
5	31-AA30 (BK/YE)	Ground
6	31S-AA84 (BK/GN)	Ground, Switched

C208

14402

N428
Auxiliary audio controls, steering wheel

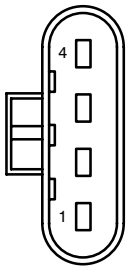

F12077

C209

14401

E61
Footwell lamp, left front (13411)

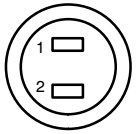

F02063

Pin	Circuit	Circuit function
1	29S-LC11 (OG/WH)	Voltage supplied at all times (overload protected), Switched
2	31S-LC11 (BK/WH)	Ground, Switched

C210

14290

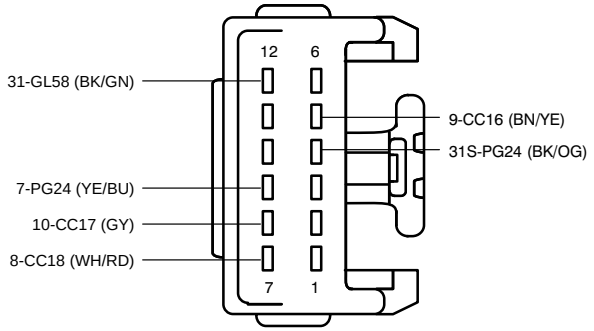

F12075

14401

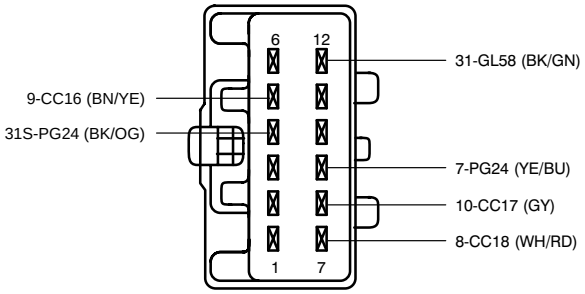

F12083