C329 (GY)

14A699

Heated seat module, passenger side front

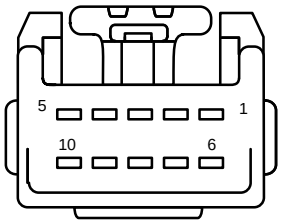

F10091

Pin	Circuit	Circuit function
1	1061 (BN/LB)	Seat cushion heater, driver side, Sensor, return
2	581 (RD)	On/Off signal
3	1064 (YE/LB)	Seat cushion heater, driver side, heater, feed
4	1153 (RD/BK)	Voltage supplied at all times (overload protected)
5	1067 (VT/LB)	Seat back heater, driver side, heater, return
6	1040 (RD/BK)	Voltage in Run (overload protected)
7	1060 (BK/LB)	Seat cushion heater, driver side, Sensor, feed
8	1205 (BK)	Ground
9	–	not used
10	461 (OG)	indicator, control

C330 (BK)

14A699

Seat adjust switch, passenger side front

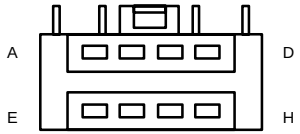

F08329

Pin	Circuit	Circuit function
A	983 (RD/LG)	Rear height motor, +/–
B	990 (YE/LB)	Front height motor, +/–
C	979 (RD/LB)	Front height motor, +/–
D	982 (YE/LG)	Rear height motor, +/–
E	1205 (BK)	Ground
F	980 (YE/WH)	Fwd/Rwd motor, +/–
G	981 (RD/WH)	Fwd/Rwd motor, +/–
H	51 (BK/WH)	Voltage supplied at all times (overload protected)

C331

14A699

Lumbar adjust switch, right front

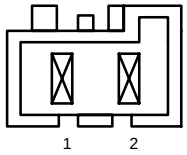

F02094

Pin	Circuit	Circuit function
1	490 (RD)	Front seat lumbar compressor motor, switched power
2	51 (BK/WH)	Voltage supplied at all times (overload protected)