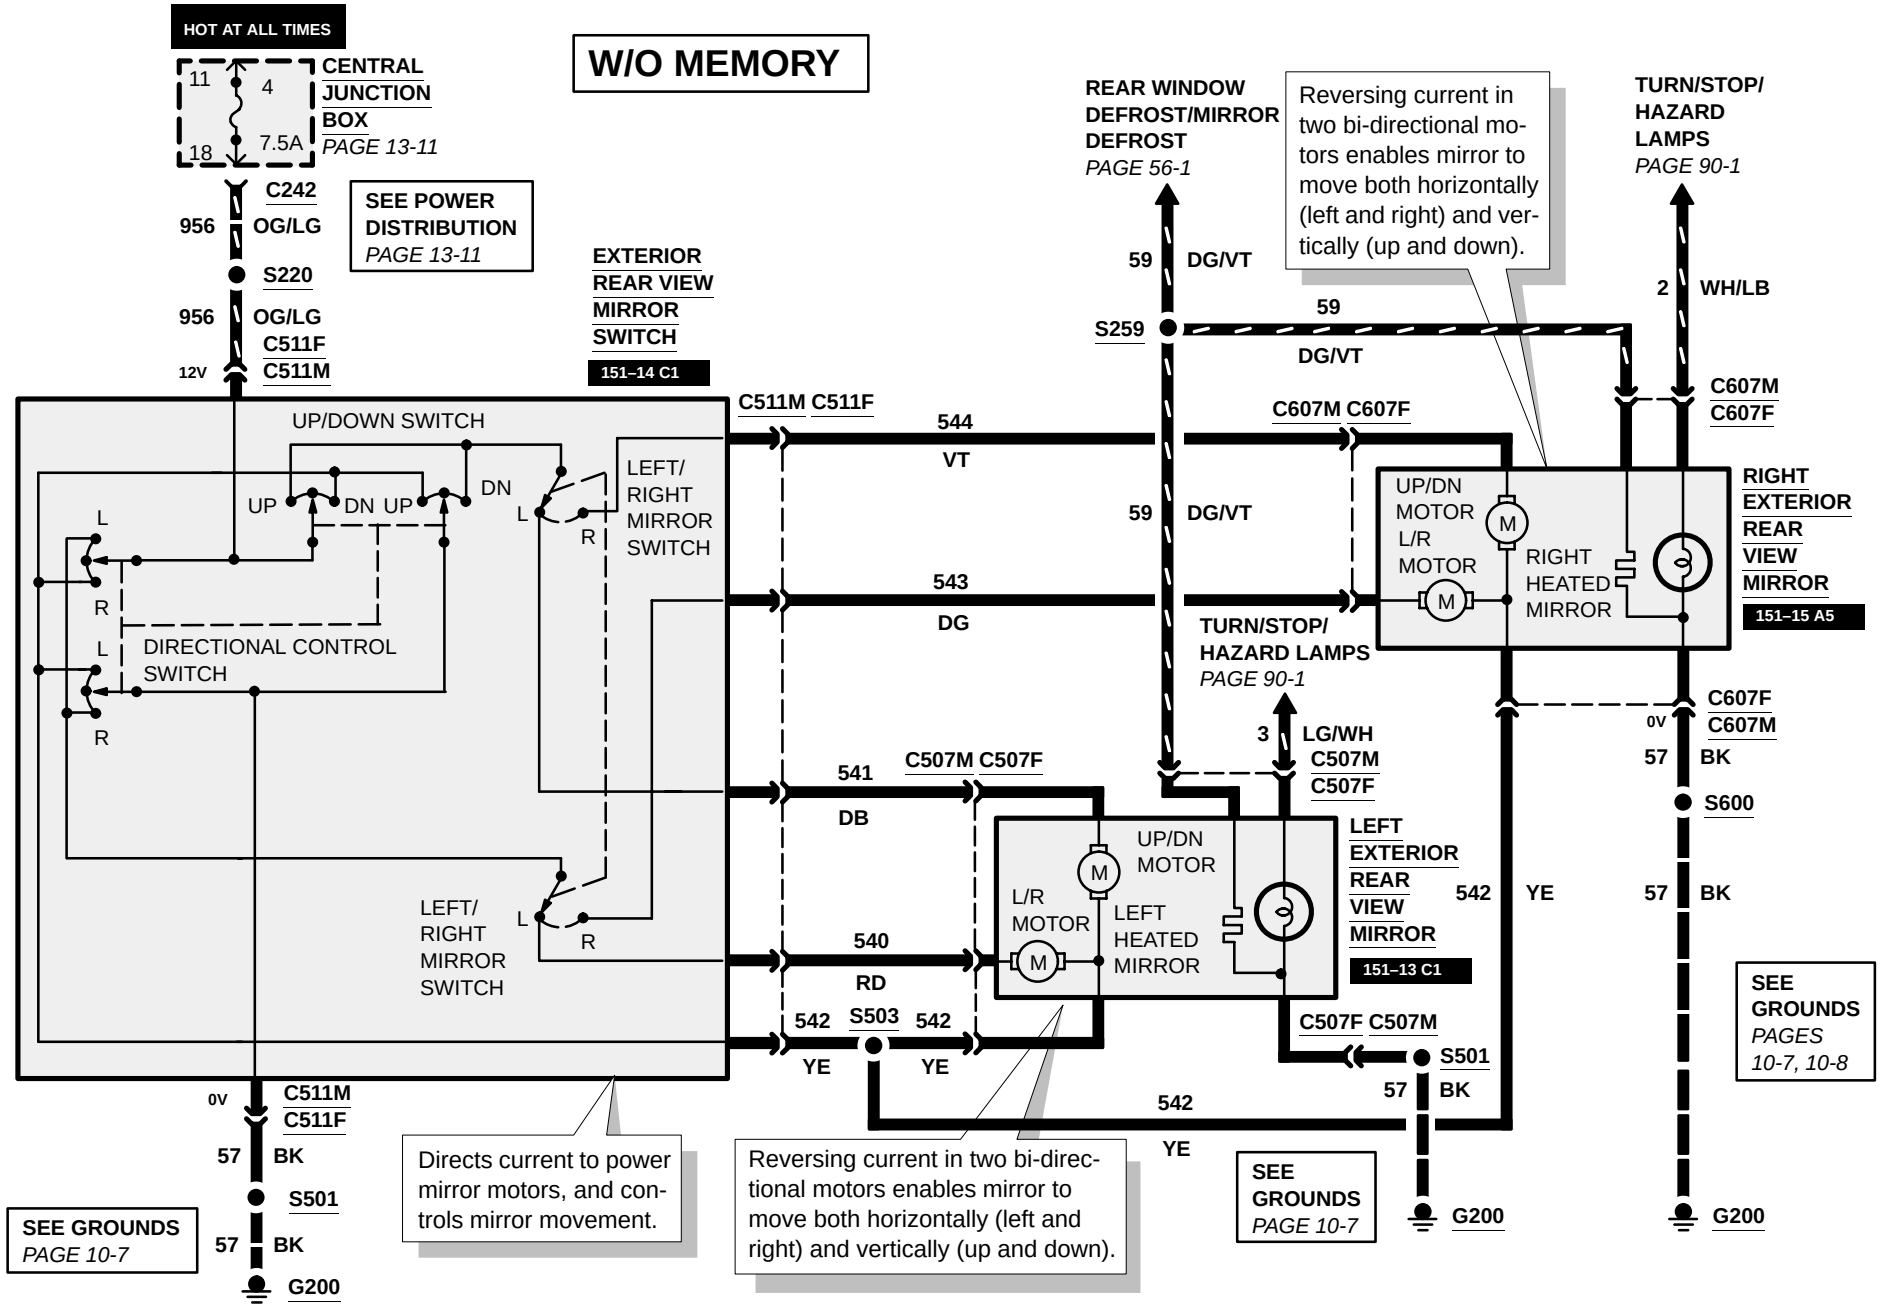
HOT AT ALL TIMES
W/O MEMORY
CENTRAL JUNCTION BOX
PAGE 13-11
11
4
18
7.5A
C242
956 OG/LG
S220
956 OG/LG
C511F
C511M
12V
SEE POWER DISTRIBUTION
PAGE 13-11
EXTERIOR REAR VIEW MIRROR SWITCH
151–14 C1
UP/DOWN SWITCH
UP
DN
DN
UP
L
R
LEFT/ RIGHT MIRROR SWITCH
DIRECTIONAL CONTROL SWITCH
LEFT/ RIGHT MIRROR SWITCH
C511M C511F
544 VT
543 DG
541 DB
540 RD
542 S503 542
YE YE
542 YE
0V
C511M
C511F
57 BK
S501
57 BK
G200
SEE GROUNDS
PAGE 10-7
Directs current to power mirror motors, and controls mirror movement.
Reversing current in two bi-directional motors enables mirror to move both horizontally (left and right) and vertically (up and down).
REAR WINDOW DEFROST/MIRROR DEFROST
PAGE 56-1
59 DG/VT
S259
59 DG/VT
59 DG/VT
Reversing current in two bi-directional motors enables mirror to move both horizontally (left and right) and vertically (up and down).
TURN/STOP/ HAZARD LAMPS
PAGE 90-1
2 WH/LB
C607M
C607F
C607M C607F
UP/DN MOTOR
L/R MOTOR
M
RIGHT HEATED MIRROR
RIGHT EXTERIOR REAR VIEW MIRROR
151–15 A5
TURN/STOP/ HAZARD LAMPS
PAGE 90-1
3 LG/WH
C507M
C507F
C507M C507F
UP/DN MOTOR
L/R MOTOR
LEFT HEATED MIRROR
LEFT EXTERIOR REAR VIEW MIRROR
151–13 C1
542 YE
C507F C507M
S501
57 BK
542 YE
SEE GROUNDS
PAGE 10-7
G200
C607F
C607M
0V
57 BK
S600
57 BK
SEE GROUNDS
PAGES 10-7, 10-8
G200