C964 (BK)

12A522

B113
Fuel tank pressure transducer sensor

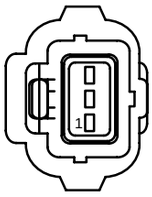

F03093

Pin	Circuit	Circuit Function
1	7-RJ13 (YE/VT)	Voltage D.C. supplied at all times (sensor)
2	9-RJ13 (BN/WH)	Sensor signal return (reference/ground)
3	8-RJ13 (WH/VT)	Sensor signal

C981

13A840

H4
Second horn



F02058

Pin	Circuit	Circuit Function
1	29S-GJ10 (OG/GN)	Voltage supplied at all times (overload protected), switched
2	31-GJ10 (BK)	Ground

C982

13A840

H1
Horn



F02058

Pin	Circuit	Circuit Function
1	29S-GJ6 (OG/YE)	Voltage supplied at all times (overload protected), switched
2	31-GJ6 (BK)	J65

C971 (BK)

14405, 14A584

M9
Rear window wiper motor



F02007

Pin	Circuit	Circuit Function
1	15-KA28 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	32-KA28 (WH/RD)	Switched between: Battery voltage, Ground or Open

C972 (BK)

14K733

V7
A/C Compressor clutch diode

F02005

Pin	Circuit	Circuit Function
1	31-FA7 (BK)	Ground
2	15S-FA7 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), switched