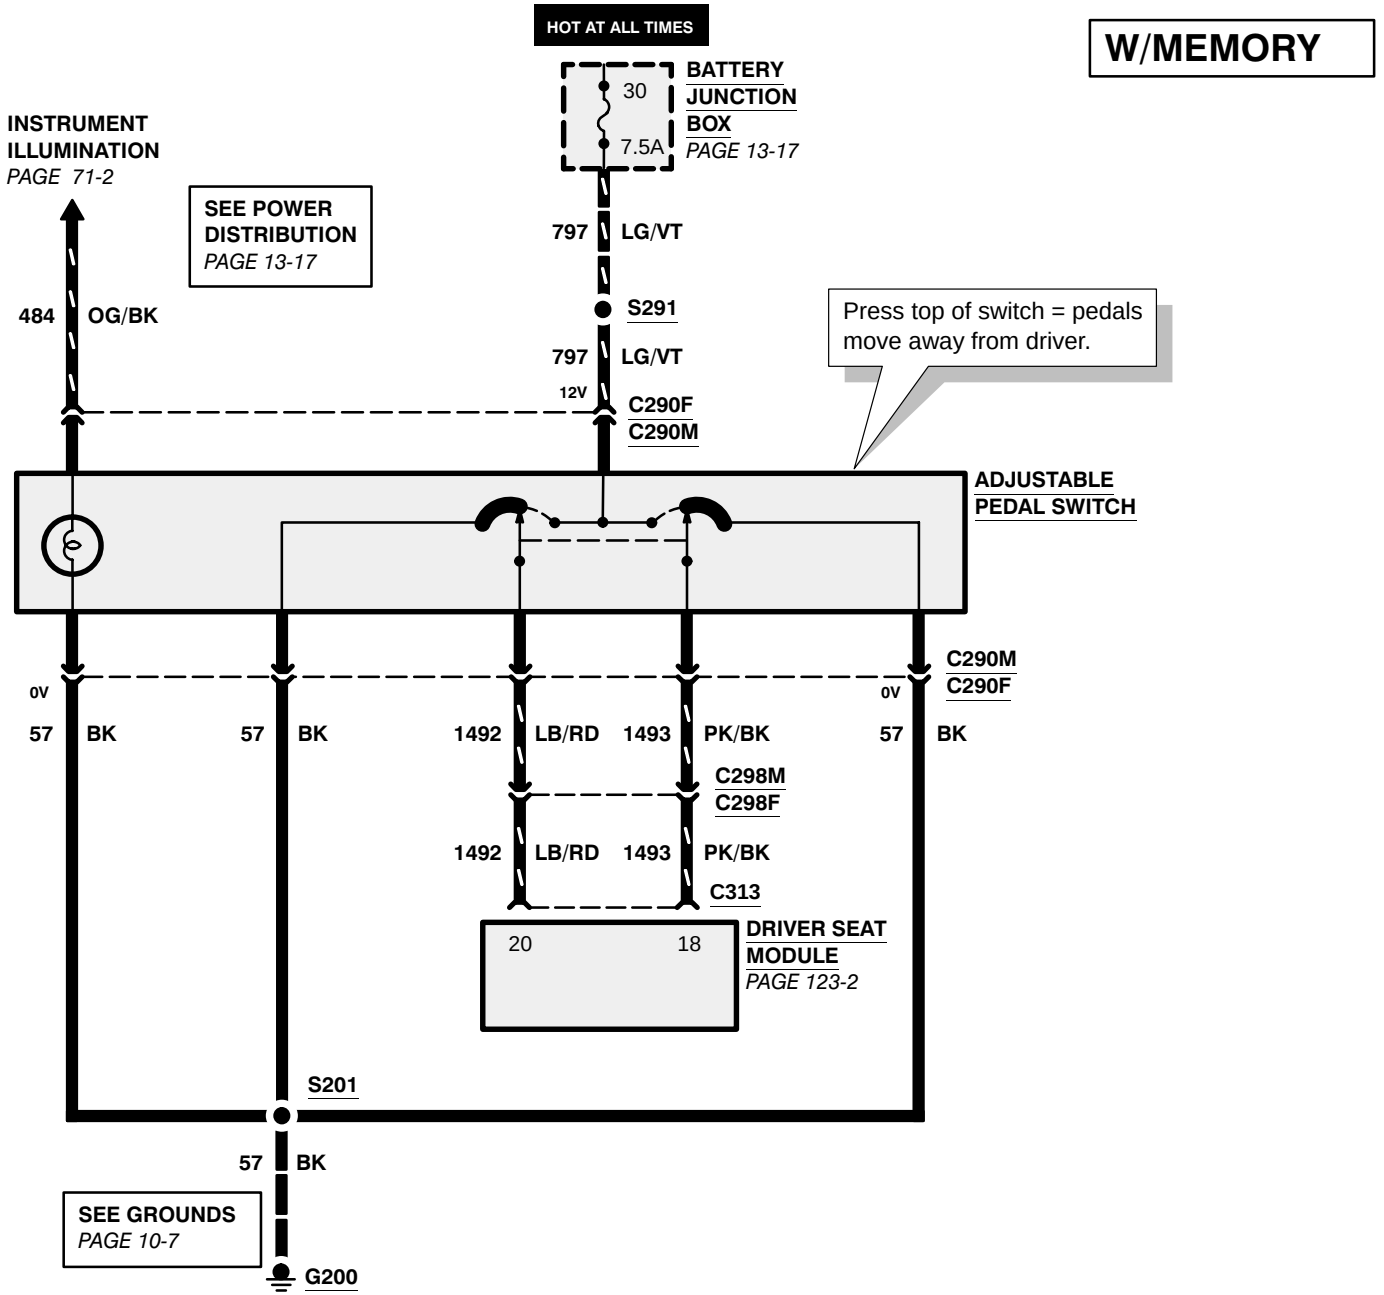
W/MEMORY
HOT AT ALL TIMES
BATTERY JUNCTION BOX
PAGE 13-17
30
7.5A
INSTRUMENT ILLUMINATION
PAGE 71-2
SEE POWER DISTRIBUTION
PAGE 13-17
797 LG/VT
S291
484 OG/BK
797 LG/VT
12V
C290F
C290M
Press top of switch = pedals move away from driver.
ADJUSTABLE PEDAL SWITCH
C290M
C290F
0V
57 BK
57 BK
1492 LB/RD
1493 PK/BK
0V
57 BK
C298M
C298F
1492 LB/RD
1493 PK/BK
C313
20
18
DRIVER SEAT MODULE
PAGE 123-2
S201
57 BK
SEE GROUNDS
PAGE 10-7
G200