C2211

14401

A450
RFI module

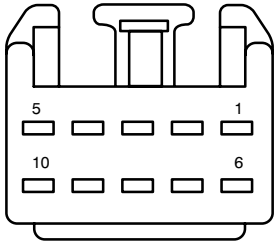

F10063

Pin	Circuit	Circuit Function
1	–	not used
2	–	not used
3	810 (RD/LG)	Brake pedal position switch (13480), input
4	810 (RD/LG)	Brake pedal position switch (13480), output
5	511 (LG)	Brake pedal position switch (13480), to stoplamps
6	10 (LG/RD)	Voltage supplied at all times (overload protected)
7	10 (LG/RD)	Voltage supplied at all times (overload protected)
8	–	not used
9	–	not used
10	574 (BK/PK)	Brake indicator, control

C3002

14B079

M130
Blower motor, rear
(18456)



F02235

Pin	Circuit	Circuit function
1	753 (YE/RD)	Center console, Heater blower motor (19805), feed
2	1133 (BN)	Blower motor, return

C3003

14B079

R78
Heater blower motor
resistor, rear
(19A706)

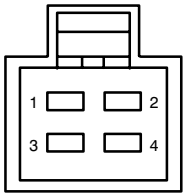

F04187

Pin	Circuit	Circuit function
1	1135 (LB/OG)	Blower motor, to switch
2	1133 (BN)	Blower motor, return
3	–	not used
4	1134 (OG/BK)	Blower motor, to switch

C3009

14A504

N615
Power point, C pillar
(19N236)

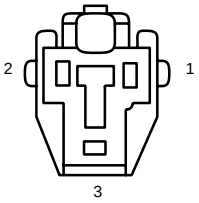

F03163

Pin	Circuit	Circuit function
1	1543 (YE)	Power point, right rear, feed
2	–	not used
3	57 (BK)	Ground

C3014

14A504

A225
Driver safety belt re-
tractor pretensioner

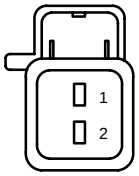

F02042

Pin	Circuit	Circuit function
1	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
2	1080 (LG/BK)	Driver safety belt retractor pretensioner, return