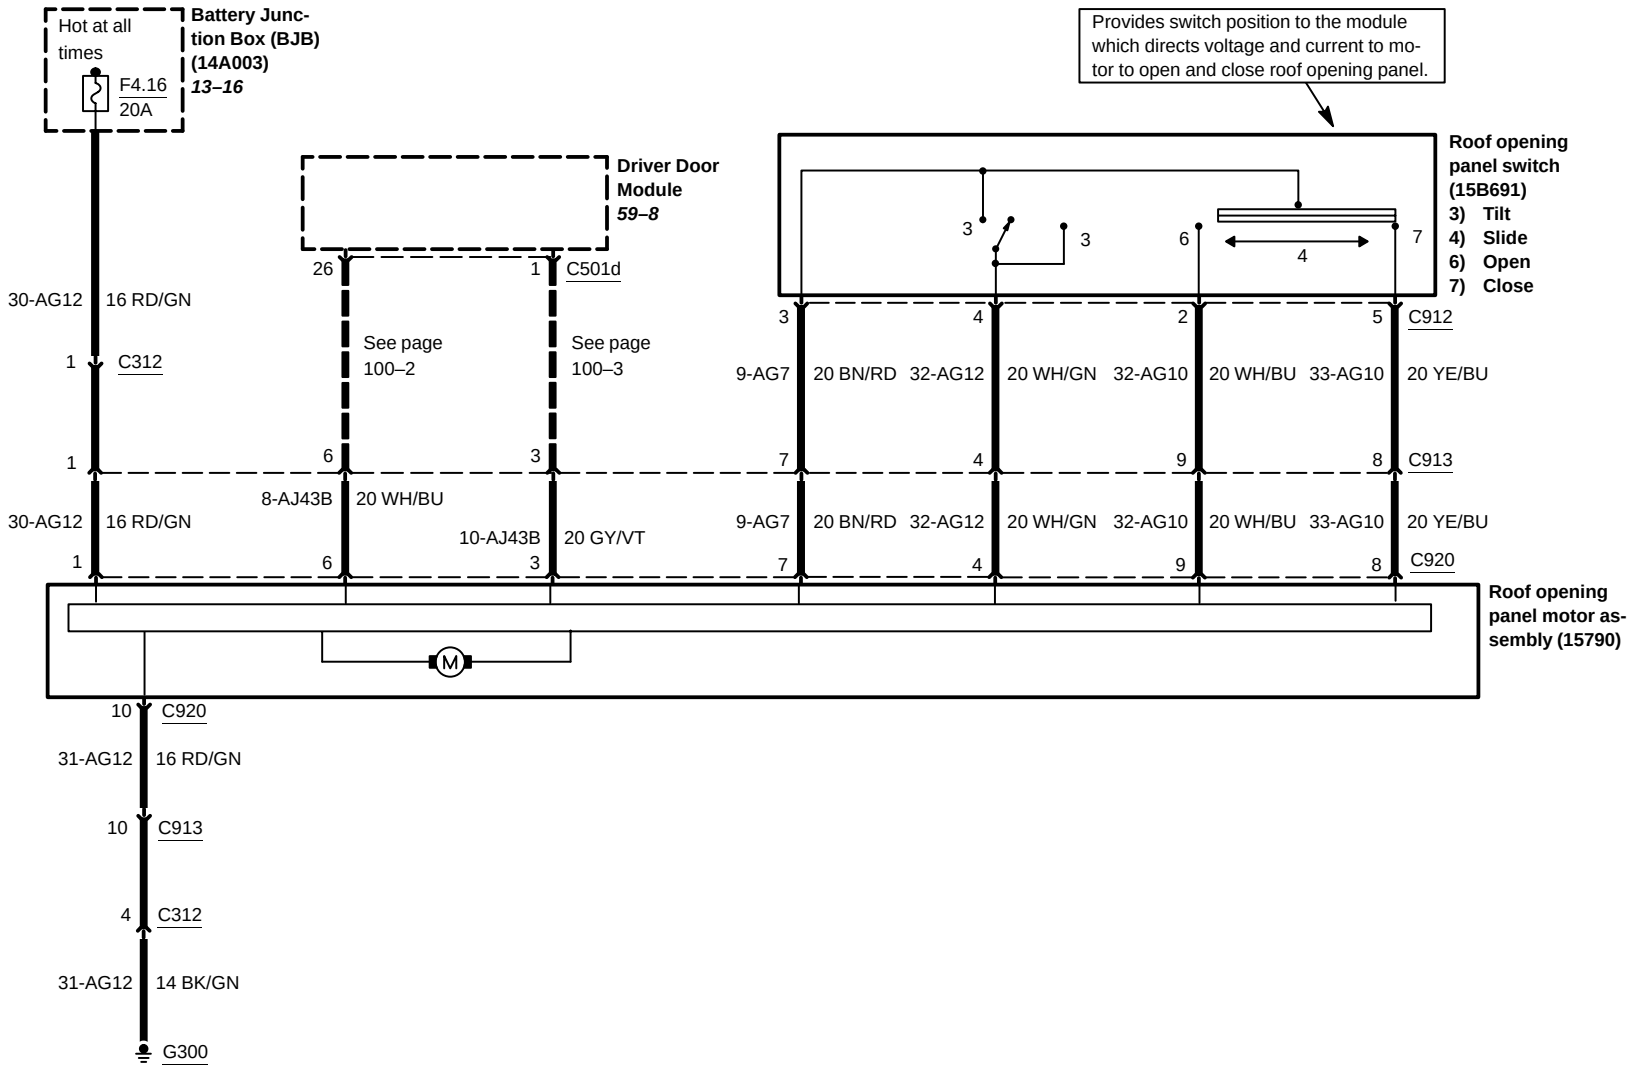
Hot at all times
F4.16
20A
Battery Junction Box (BJB) (14A003) 13–16
Driver Door Module 59–8
Provides switch position to the module which directs voltage and current to motor to open and close roof opening panel.
Roof opening panel switch (15B691)
3) Tilt
4) Slide
6) Open
7) Close
30-AG12 16 RD/GN
1 C312
26 1 C501d
See page 100–2
See page 100–3
3 4 2 5 C912
9-AG7 20 BN/RD 32-AG12 20 WH/GN 32-AG10 20 WH/BU 33-AG10 20 YE/BU
1 6 3 7 4 9 8 C913
8-AJ43B 20 WH/BU
10-AJ43B 20 GY/VT
30-AG12 16 RD/GN
1 6 3 7 4 9 8 C920
Roof opening panel motor assembly (15790)
M
10 C920
31-AG12 16 RD/GN
10 C913
4 C312
31-AG12 14 BK/GN
G300