C2138

14401

Convertible top switch

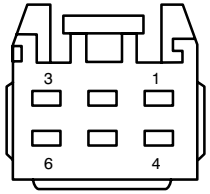

F06303

Pin	Circuit	Circuit function
1	31-LE15 (BK/GN)	Ground
2	8-AG15 (WH/RD)	Sensor signal
3	31-AG15 (BK/BU)	Ground
4	64-LK15 (BU/WH)	Variable DC voltage (not overload protected)
5	10-AG15 (GY/RD)	Signal 2 (Y–direction, reverse, downward)
6	–	not used

C2147

14401

Seat heater switch, driver side



F06309

Pin	Circuit	Circuit function
1	31-HC6 (BK)	Ground
2	8-HC15 (WH)	Sensor signal
3	32-HC15 (WH)	Switched between: Battery voltage, Ground or Open
4	33-HC15 (YE)	Switched between: Battery voltage, Ground or Open
5	64-HC6 (BU)	Switch illumination
6	10-HC15 (GY)	Signal 2 (Y–direction, reverse, downward)