C501a (GY)

14A005

Driver Door Module

* with remote keyless entry

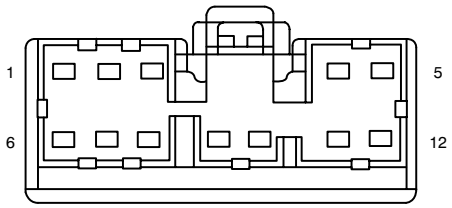

F12181

Pin	Circuit	Circuit function
1	70 (LB/WH)	ISO Bus
2	–	not used
3	340 (RD/LB)	panic/alarm demand signal
4	–	not used
5	–	not used
6	66 (LB)	Key pad illumination
7	465 (WH/LB)	Illuminated entry signal
8	*569 (DG)	Brake pedal position switch (13480), to stoplamps
9	344 (BK/YE)	Door ajar indicator
10	689 (DB)	switched power to starter solenoid
11	78 (LB/YE)	Key pad button 1/2, output
12	79 (LG/RD)	Key pad button 5/6, output

C501b (GY)

14A005

Driver Door Module

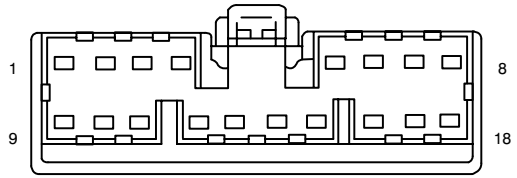

F18025

Pin	Circuit	Circuit function
1	259 (OG/RD)	Key pad common
2	120 (PK/LG)	Door unlock, switch, input
3	118 (PK/OG)	passenger door Unlock, output
4	676 (PK/OG)	Ground
5	163 (RD/OG)	driver door Unlock, output
6	84 (VT/YE)	Luggage compartment switch, Power
7	84 (VT/YE)	Luggage compartment switch, Power
8	117 (PK/BK)	Door lock, output
9	121 (YE/BK)	Key pad button 3/4, output
10	119 (PK/YE)	Door lock switch, input
11	–	not used
12	158 (BK/PK)	Key warning switch (11A127), input
13	26 (WH/VT)	Luggage compartment switch Power
14	–	not used
15	57 (BK)	Ground
16	–	not used
17	–	not used
18	–	not used