C175e (BK)

* 4.6L
** Early production

12B637

Powertrain Control Module
(PCM) (12A650)

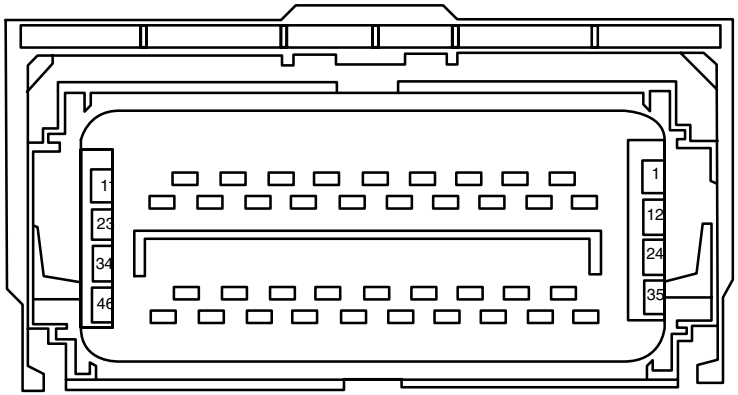

F46001

Pin	Circuit	Circuit function
1	1026 (PK/WH)	Coil On Plug (COP) 2 (12029), control
2	264 (WH/LB)	Idle Air Control (IAC) valve (9F715), control
3	559 (TN/BK)	Fuel injector 5, control
4	560 (LG/OG)	Fuel injector 6, control
5	561 (TN/RD)	Fuel injector 7, control
6	562 (LB)	Fuel injector 8, control
7	557 (BN/YE)	Fuel injector 3, control
8	558 (BN/LB)	Fuel injector 4, control
9	**1929 (GY/YE)	Voltage supplied in Start and Run (overload protected)
10	–	not used
11	1029 (WH/RD)	Coil On Plug (COP) 8 (12029), control
12	1027 (PK/LB)	Coil On Plug (COP) 7 (12029), control
13	367 (BN)	Intake Manifold Runner Control (IMRC) module
14	555 (TN)	Fuel injector 1, control
15	556 (WH)	Fuel injector 2, control
16	–	not used
17	–	not used
18	–	not used
19	–	not used
20	388 (YE/LB)	Heated Oxygen Sensor (HO2S) #21 (9F472), heater
21	387 (RD/WH)	Heated Oxygen Sensor (HO2S) #11 (9F472), heater
22	360 (BN/PK)	EGR Vacuum Regulator (EVR), control
23	1030 (DG/VT)	Coil On Plug (COP) 4 (12029), control
24	1028 (WH/PK)	Coil On Plug (COP) 3 (12029), control
25	359 (GY/RD)	signal, return
26	74 (GY/LB)	Heated Oxygen Sensor (HO2S) #11 (9F472), input
27	94 (RD/BK)	Heated Oxygen Sensor (HO2S) #21 (9F472), input
28	*311 (DG/VT)	Knock sensor (12A699), signal 2+
29	310 (YE/RD)	Knock sensor (12A699), signal 1+
30	349 (DB)	Crankshaft position sensor (6C315) +
31	795 (DG)	Camshaft position sensor (6B288) to Powertrain Control Module (PCM) (12A650)
32	354 (LG/RD)	Engine Coolant Temperature (ECT) sensor (12A648), input
33	352 (BN/LG)	Differential Pressure Feedback EGR (DPFE) sensor, input
34	1021 (LG/YE)	Coil On Plug (COP) 5 (12029), control
35	1024 (LG/WH)	Coil On Plug (COP) 1 (12029), control
36	351 (BN/WH)	Reference, voltage
37	–	not used
38	–	not used
39	*1274 (DG/WH)	Knock sensor (12A699), signal 2–
40	1273 (YE)	Knock sensor (12A699), signal 1–
41	350 (GY)	Crankshaft position sensor (6C315) –
42	–	not used
43	–	not used
44	355 (GY/WH)	Throttle Position Sensor (TPS) (9B989), input
45	1102 (YE/LG)	Cylinder–head temperature sensor (6G004) to Powertrain Control Module (PCM) (12A650)
46	1025 (OG/YE)	Coil On Plug (COP) 6 (12029), control