C1327

12A581

K395
Fuel valve relay

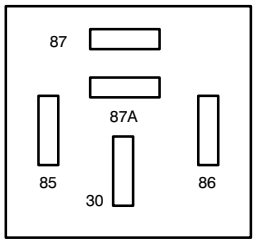

F05129

Pin	Circuit	Circuit function
30	1059 (LB/OG)	Voltage supplied at all times (overload protected)
85	926 (LB/OG)	Fuel valve relay, control
86	361 (RD)	Voltage supplied in Start and Run (overload protected)
87	238 (DG/YE)	Fuel valve relay, switched power, output
87A	–	not used

C1349

14401

M204
Front blower motor
resistor assembly

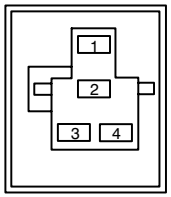

F04341

Pin	Circuit	Circuit function
1	754 (LG/WH)	Blower switch speed control, to resistor
2	261 (OG/BK)	Blower motor, to switch – High
3	57 (BK)	Ground
4	752 (YE/RD)	Blower switch speed control, to resistor

C2003

14A005

M236
Adjustable pedal
motor (2C429)



F02130

Pin	Circuit	Circuit function
1	1494 (RD)	Adjustable pedal switch, Forward
2	1495 (WH)	Adjustable pedal switch, Rearward

C2007

14401

A102
Passive anti–theft transceiv-
er module (15607)

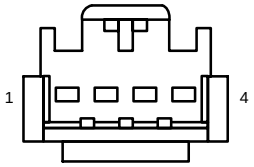

F04257

Pin	Circuit	Circuit function
1	1267 (BK/YE)	Ground
2	1266 (RD/YE)	Power (Start or Run)
3	1216 (GY/OG)	RX, signal
4	1215 (WH/LG)	TX, signal

C2008

14401

Y215
Brake shift interlock

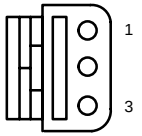

F03271

Pin	Circuit	Circuit function
1	511 (LG)	Brake pedal position switch (13480), to stoplamps
2	57 (BK)	Ground
3	298 (VT/OG)	Voltage in Run (overload protected)