C376

14A699

B221
Driver memory
backrest sensor

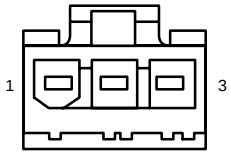

F03111

Pin	Circuit	Circuit function
1	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
2	445 (OG/LB)	Backrest forward/rearward sensor
3	447 (OG/R)	Sensor, return, from, Driver seat module (14C718)

C383

14B719

M214
Power seat motor
assembly, left

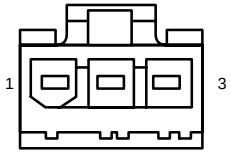

F03111

Pin	Circuit	Circuit function
1	446 (OG/WH)	Sensor, feed, from, Driver seat module (14C718)
2	443 (LG/RD)	Driver seat module (14C718), to, Power seat motor assembly, left
3	447 (OG/R)	Sensor, return, from,Driver seat module (14C718)

C401a

14A411

Vehicle Emergency
Message System
(VEMS) module

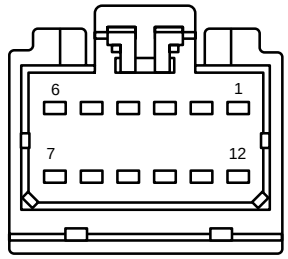

F12105

Pin	Circuit	Circuit function
1	828 (VT/LB)	Radio amplifier, auxiliary power feed
2	1880 (WH)	Remote Emergency Satellite Cellular Unit (RESCU)
3	1882 (LG)	Radio (18806), to CD changer, Left –
4	1881 (RD)	Radio (18806), to CD changer, Right +
5	915 (PK/LB)	SCP Bus –
6	694 (BK/LG)	Ground
7	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
8	–	not used
9	1883 (LB)	Audio corporate protocol A
10	1884 (OG)	Audio corporate protocol B
11	914 (TN/OG)	SCP Bus +
12	1885 (BK)	audio ground