C240

14401

Radio (19B132)

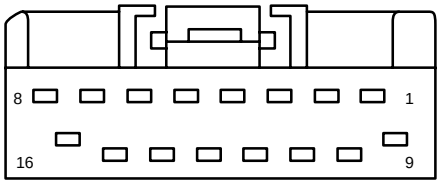

F16071

Pin	Circuit	Circuit function
1	19 (LB/RD)	Instrument illumination, feed
2	57 (BK)	Ground
3	689 (DB)	Voltage supplied in Start (overload protected)
4	651 (BK/YE)	Clock (15000), signal
5	802 (OG/RD)	Speaker, right rear (18808) +
6	803 (BN/PK)	Speaker, right rear (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	811 (DG/OG)	Speaker, right front (18808) –
9	828 (VT/LB)	Voltage supplied at all times (overload protected)
10	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
11	694 (BK/LG)	audio ground
12	800 (GY/LB)	Speaker, left rear (18808) +
13	801 (TN/YE)	Speaker, left rear (18808) –
14	804 (OG/LG)	Speaker, left front (18808) +
15	813 (LB/WH)	Speaker, left front (18808) –
16	694 (BK/LG)	audio ground

C241 (BK)

14401

Rear window defrost switch (18578)

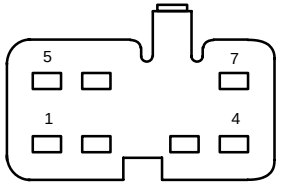

F07107

Pin	Circuit	Circuit function
1	1010 (DB/OG)	Rear window defrost switch (18578), input
2	57 (BK)	Ground
3	484 (OG/BK)	Interior lamps, feed
4	59 (DG/VT)	Fused rear window defrost relay, switched power
5	–	not used
6	–	not used
7	57 (BK)	Ground