C3171

19949

K393
Auxiliary blower
speed relay 1

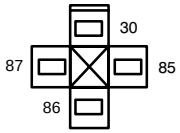

F04127

Pin	Circuit	Circuit function
30	515 (OG/RD)	Resistor, Blower motor, High
85	1372 (PK/BK)	Auxiliary blower speed relay 1, control
86	1507 (WH/RD	Power, feed
87	752 (YE/RD)	Blower switch speed control, to resistor
87a	–	not used

C3172

19949

K394
Auxiliary blower
speed relay 2

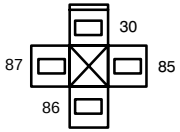

F04127

Pin	Circuit	Circuit function
30	752 (YE/RD)	Blower switch speed control, to resistor
85	1373 (GY/YE)	Auxiliary blower speed relay 2, control
86	1507 (WH/RD)	Power, feed
87	758 (VT/WH)	Auxiliary blower motor relay, to, Auxiliary blower motor resistor assembly (19A706)
87a	–	not used

C4009

14N139

B254
Parking aid sensor,
outer left (15K859)

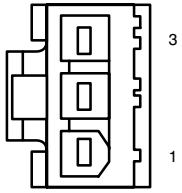

F03111

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1441 (WH/LG)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4010

14N139

B252
Parking aid sensor,
inner left (15K859)

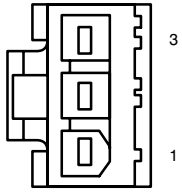

F03111

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1442 (DG/WH)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, inner left (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return

C4011

14N139

B255
Parking aid sensor,
outer right (15K859)

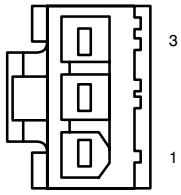

F03111

Pin	Circuit	Circuit function
1	1439 (BN/PK)	Parking Aid Module (PAM) (15K866), Sensor, Power
2	1444 (DB/YE)	Parking Aid Module (PAM) (15K866), to, Parking aid sensor, outer right (15K859), input
3	1440 (DG/YE)	Parking Aid Module (PAM) (15K866), Sensor, return