C701

14A488

Window adjust switch,
left rear

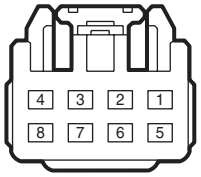

YF1T-14489-EA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	Illumination ground
2	316 (YE/LB)	Window switch feed, down
3	885 (YE/LB)	Window motor feed, down
4	170 (RD/LB)	Window lockout, control
5	1011 (TN/OG)	Illumination, power
6	—	not used
7	884 (YE/BK)	Window motor feed, up
8	317 (GY/OG)	Window switch feed, up

C702

14A488

Speaker, left rear

XR3T-14A464-BA (F)

Pin	Circuit	Circuit Function
1	800 (GY/LB)	Amplifier/speaker switch feed to left rear speaker
2	801 (TN/YE)	Amplifier/speaker switch ground to left rear speaker

C703

14683

Power window motor,
left rear

XS71-14A464-LBA (F)

Pin	Circuit	Circuit Function
1	881 (BN)	Window motor feed, up
2	882 (BN/YE)	Window motor feed, down

C704

14A488

Door lock actuator,
left rear

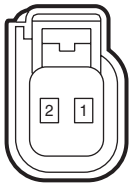

YF1T-14A464-FA (F)

Pin	Circuit	Circuit Function
1	117 (PK/BK)	Door lock motor (lock)
2	118 (PK/OG)	Door lock motor (unlock)

C715

14A488

Door ajar switch,
left rear

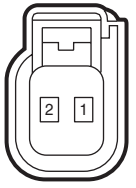

YF1T-14A464-GA (F)

Pin	Circuit	Circuit Function
1	1205 (BK)	General ground (type 4 ground)
2	759 (LG/YE)	Left rear door ajar lamp to module, GEM-input