C303

14A005

A226
Passenger safety belt retractor pretensioner

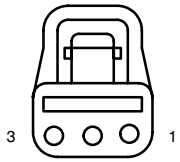

F03035

Pin	Circuit	Circuit function
1	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
2	–	not used
3	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed

C310a

14A005

A208
Restraints control module (14B321)

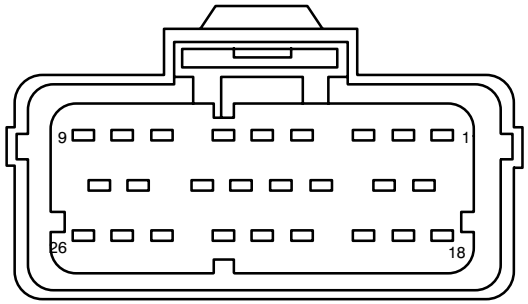

F26023

Pin	Circuit	Circuit function
1	1556 (DG/VT)	Seat weight sensor, passenger, feed
2	1557 (DG/OG)	Seat weight sensor, passenger, return
3	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
4	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
5	85 (BN/LB)	Safety belt buckle switch (10B924), input
6	1081 (YE/RD)	Passenger safety belt retractor pretensioner, feed
7	1082 (YE/BK)	Passenger safety belt retractor pretensioner, return
8	1520 (LG)	Seat position sensor, – horizontal sense
9	1558 (TN/BK)	Seat track position sensor, driver, return
10	1514 (RD/BK)	Safety belt buckle switch (10B924), input
11	1516 (YE/WH)	Driver air bag, feed, monitor
12	1517 (RD/OG)	Driver air bag, return
13	–	not used
14	–	not used
15	–	not used
16	–	not used
17	–	not used
18	–	not used
19	–	not used
20	1518 (BK/WH)	Passenger air bag, feed, monitor
21	1519 (LG/RD)	Passenger air bag, return
22	629 (BN)	not used
23	–	not used
24	–	not used
25	617 (PK/OG)	Air bag crash sensor #1, feed
26	618 (VT/LG)	Air bag crash sensor #1, monitor