C1003

14290

K318
COPS & Heated
Oxygen Sensor
(HO2S) relay

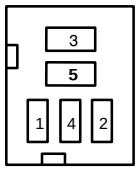

F05064

Pin	Circuit	Circuit function
1	15-RH9B (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected)
2	31-RH9A (BK)	Ground
3	30-RH9A (RD)	Voltage supplied at all times (not overload protected)
4	–	not used
5	15S-DB2 (GN/BU)	Voltage, ignition switch in Start or Run (not overload protected), Switched

C1005

14290

K315
Auxiliary coolant
pump relay

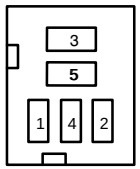

F05064

Pin	Circuit	Circuit function
1	30-FA74A (RD/GN)	Voltage supplied at all times (not overload protected)
2	91S-FA76 (BN/BU)	Ground, Switched
3	30-FA74 (RD/GN)	Voltage supplied at all times (not overload protected)
4	–	not used
5	30S-FB1 (RD/YE)	Voltage supplied at all times (not overload protected), Switched