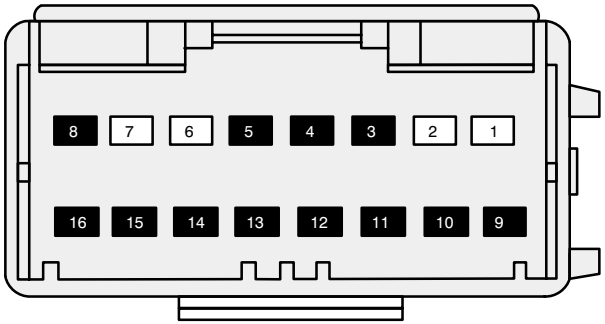

REAR SPEAKER JUMPER

PIN	CIRCUIT	CIRCUIT FUNCTION
1	802 (OG/RD)	RR Speaker Signal (+)
2	802 (OG/RD)	RR Speaker Signal (+)
3	–	NOT USED
4	–	NOT USED
5	–	NOT USED
6	800 (GY/LB)	LR Speaker Signal (+)
7	800 (GY/LB)	LR Speaker Signal (+)
8	–	NOT USED
9	–	NOT USED
10	–	NOT USED
11	–	NOT USED
12	–	NOT USED
13	–	NOT USED
14	–	NOT USED
15	–	NOT USED
16	–	NOT USED

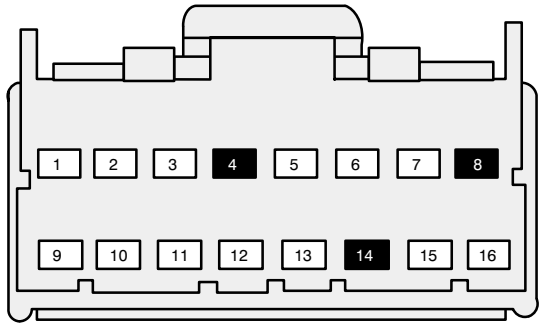

C917

REAR RADIO CONTROL

PIN	CIRCUIT	CIRCUIT FUNCTION
1	825 (TN/LG)	RR Speaker Signal Out (+)
2	802 (OG/RD)	RR Speaker Signal In (+)
3	803 (BN/PK)	RR Speaker Signal (–)
4	–	NOT USED
5	801 (TN/YE)	LR Speaker Signal (–)
6	800 (GY/LB)	LR Speaker Signal In (+)
7	827 (TN/WH)	LR Speaker Signal Out (+)
8	–	NOT USED
9	1068 (LG/BK)	Audio System ON
10	797 (LG/VT)	Power (Hot at All Times)
11	694 (BK/LG)	Ground
12	832 (LB/PK)	ACP A
13	833 (TN)	ACP B
14	–	NOT USED
15	1205 (BK)	Ground
16	1417 (LG/RD)	Illumination Power