C2176

14A200

A416
Auxiliary Powertrain Control Module (APCM)

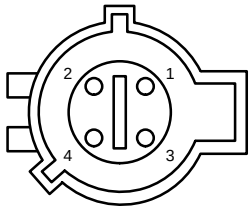

F04082

Pin	Circuit	Circuit function
1	914 (TN/OG)	SCP Bus +
2	57 (BK)	Ground
3	915 (PK/LB)	Motors –
4	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)

C2186

14401

K383
ABS relay

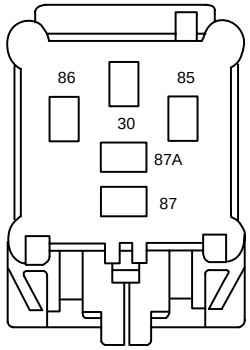

F05149

Pin	Circuit	Circuit function
30	57 (BK)	Ground
85	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
86	599 (PK/LG)	Relay, control, output
87	–	not used
87A	128 (VT/YE)	Hot in Start or Run

C2187

14401

F01067

Pin	Circuit	Circuit function
1	1084 (PK)	not used

C2188a

A11
Radio (18806)

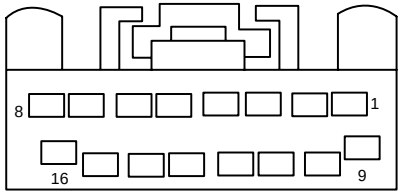

F16131

Pin	Circuit	Circuit function
1	19 (LB/RD)	Voltage supplied at all times (overload protected)
2	57 (BK)	Ground
3	1000 (RD/BK)	Voltage supplied in Start (overload protected)
4	–	not used
5	802 (OG/RD)	Speaker, right rear (18808) +
6	803 (BN/PK)	Speaker, right rear (18808) –
7	805 (WH/LG)	Speaker, right front (18808) +
8	811 (DG/OG)	Speaker, right front (18808) –
9	729 (RD/WH)	Voltage supplied at all times (overload protected)
10	137 (YE/BK)	Voltage in Run or Accessory (overload protected)
11	694 (BK/LG)	Ground
12	800 (YE/LB)	Speaker, left rear (18808) +
13	801 (TN/YE)	Speaker, left rear (18808) +
14	804 (OG/LG)	Speaker, left front (18808) +
15	813 (LB/WH)	Speaker, left front (18808) –
16	694 (BK/LG)	Ground