C270b (BN)

14401

P91
Central Junction
Box (CJB) (14A068)

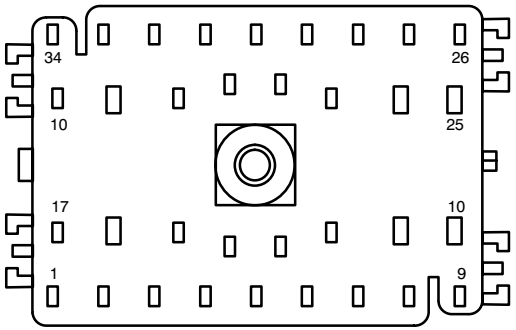

F34007

Pin	Circuit	Circuit function
1	533 (TN/RD)	Voltage supplied in Start and Run (overload protected)
	294 (WH/LB)	
2	188 (WH/PK)	Hot with Headlamps on
3	–	not used
4	1000 (RD/BK)	Voltage supplied in Start (overload protected)
	1000 (RD/BK)	
5	829 (WH/VT)	Voltage supplied at all times (overload protected)
6	160 (DB/WH)	Headlamp, left (13008), (Low beam lamp feed)
7	13 (RD/BK)	Power, Hot with Low Beams on
8	296 (WH/VT)	Voltage in Run (overload protected)
9	–	not used
10	991 (TN/LB)	Master window adjust switch (14529), return, Down
11	1052 (TN/BK)	Fused battery feed, from, Battery Junction Box (BJB)
12	687 (GY/YE)	Voltage in Run (overload protected)
13	–	not used
14	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
15	161 (DG/OG)	Headlamp, right (13008), (Low beam lamp feed)
16	964 (DB/LG)	fused feed, Hot in start or run
17	797 (LG/VT)	F2.31, feed

Pin	Circuit	Circuit function
18	32 (RD/LB)	Voltage supplied in Start (overload protected)
19	325 (DB/OG)	Voltage supplied in Start (overload protected)
	325 (DB/OG)	
20	950 (WH/BK)	Voltage in Run or Accessory (overload protected)
21	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
22	679 (GY/BK)	Vehicle Speed Sensor (VSS) +
23	186 (BN/LB)	Rear window defrost relay, switched power
24	57 (BK)	Ground
25	1001 (WH/YE)	Voltage supplied at all times (overload protected)
26	–	not used
27	–	not used
28	995 (GY)	Window motor, feed, Down
29	325 (DB/OG)	Starter relay (11450), control
30	–	not used
31	640 (RD/YE)	Voltage supplied in Start and Run (overload protected)
32	705 (LG/OG)	Battery saver relay, switched power
33	14 (BN)	F2.18, feed
34	16 (RD/LG)	Voltage supplied in Start and Run (overload protected)