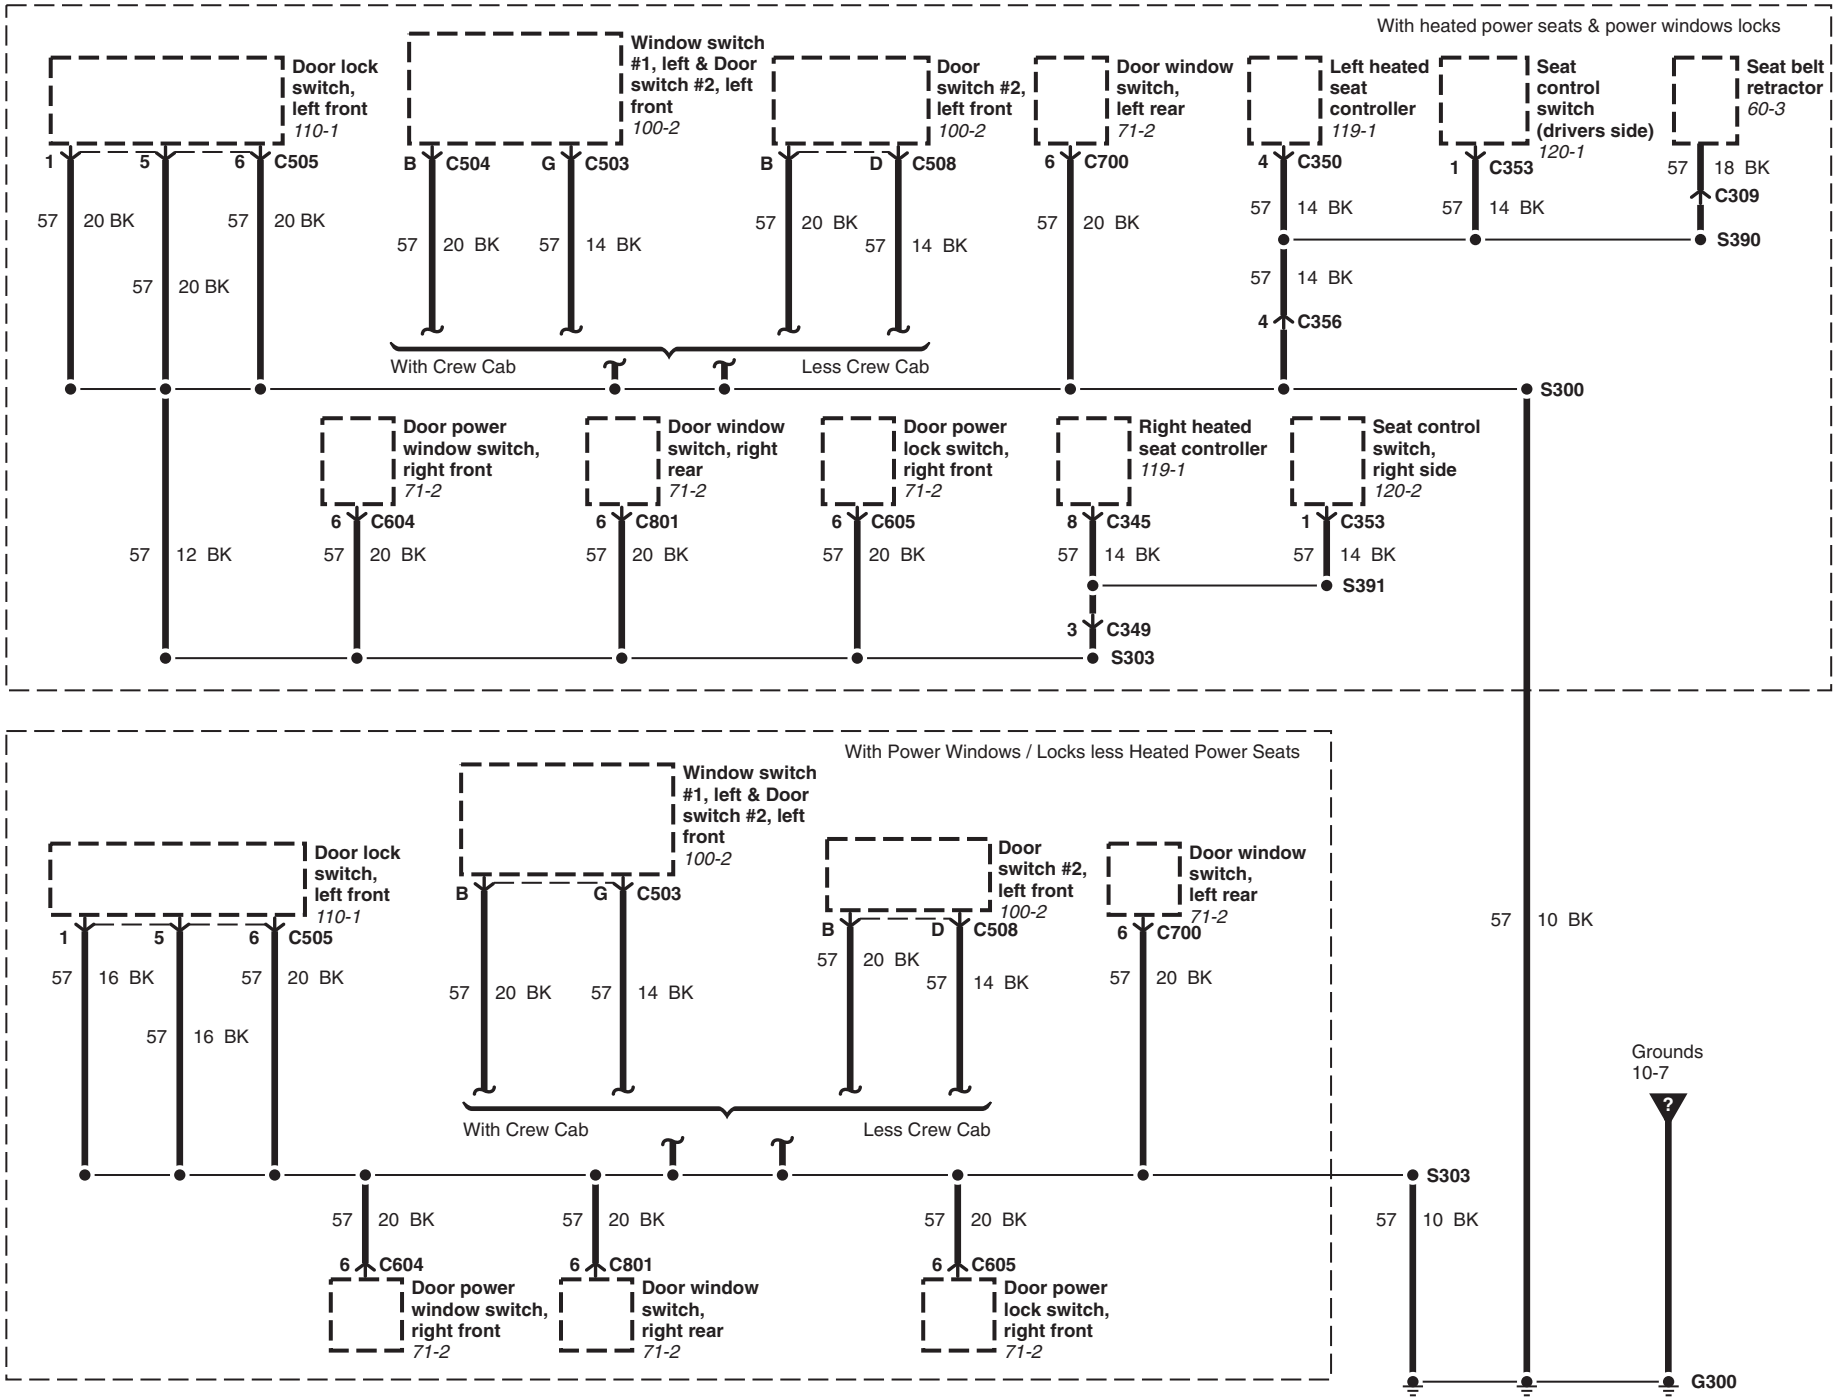
With heated power seats & power windows locks
Door lock switch, left front 110-1
Window switch #1, left & Door switch #2, left front 100-2
Door switch #2, left front 100-2
Door window switch, left rear 71-2
Left heated seat controller 119-1
Seat control switch (drivers side) 120-1
Seat belt retractor 60-3
1 5 6 C505
B C504 G C503
B D C508
6 C700
4 C350
1 C353
57 18 BK C309
S390
57 20 BK
57 14 BK
4 C356
With Crew Cab
Less Crew Cab
S300
Door power window switch, right front 71-2
Door window switch, right rear 71-2
Door power lock switch, right front 71-2
Right heated seat controller 119-1
Seat control switch, right side 120-2
6 C604
6 C801
6 C605
8 C345
1 C353
57 12 BK
57 14 BK
S391
3 C349
S303
With Power Windows / Locks less Heated Power Seats
Door lock switch, left front 110-1
Window switch #1, left & Door switch #2, left front 100-2
Door switch #2, left front 100-2
Door window switch, left rear 71-2
1 5 6 C505
B G C503
B D C508
6 C700
57 16 BK
57 20 BK
57 14 BK
57 10 BK
With Crew Cab
Less Crew Cab
S303
6 C604
6 C801
6 C605
Door power window switch, right front 71-2
Door window switch, right rear 71-2
Door power lock switch, right front 71-2
Grounds 10-7
G300