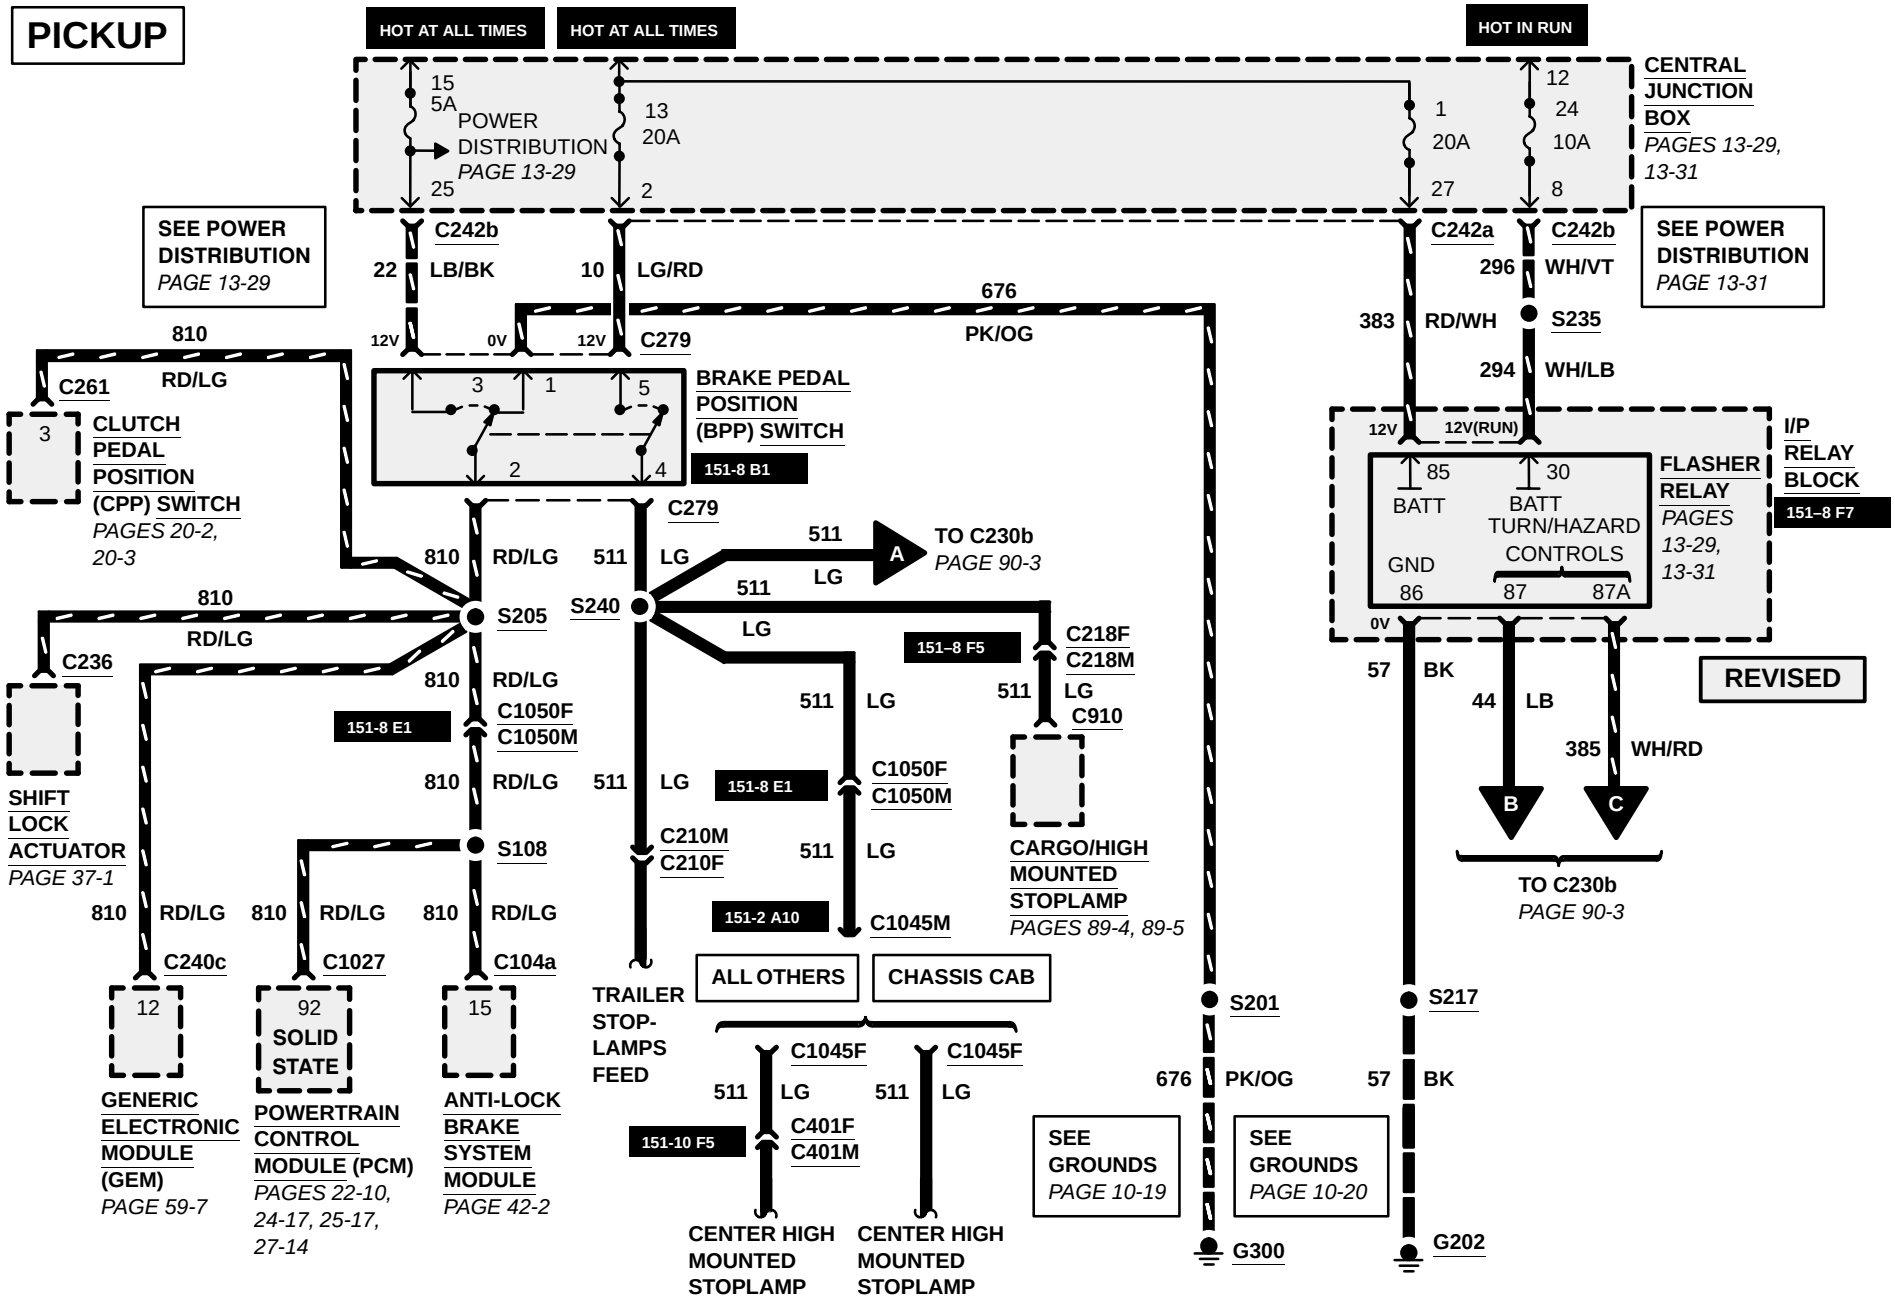
PICKUP
HOT AT ALL TIMES
HOT AT ALL TIMES
HOT IN RUN
15
5A
POWER DISTRIBUTION
PAGE 13-29
25
13
20A
2
1
20A
27
12
24
10A
8
CENTRAL JUNCTION BOX
PAGES 13-29, 13-31
SEE POWER DISTRIBUTION
PAGE 13-29
C242b
22 LB/BK
10 LG/RD
12V
0V
12V
C279
676
PK/OG
C242a
C242b
296 WH/VT
383 RD/WH
S235
294 WH/LB
SEE POWER DISTRIBUTION
PAGE 13-31
810
RD/LG
C261
3
CLUTCH PEDAL POSITION (CPP) SWITCH
PAGES 20-2, 20-3
3
1
5
2
4
BRAKE PEDAL POSITION (BPP) SWITCH
151-8 B1
12V
12V(RUN)
I/P RELAY BLOCK
151–8 F7
85
30
BATT
BATT
TURN/HAZARD CONTROLS
GND
86
87
87A
FLASHER RELAY
PAGES 13-29, 13-31
0V
57 BK
44 LB
385 WH/RD
REVISED
C279
810 RD/LG
511 LG
511
LG
A
TO C230b
PAGE 90-3
S205
S240
511
LG
151–8 F5
C218F
C218M
511
LG
C910
CARGO/HIGH MOUNTED STOPLAMP
PAGES 89-4, 89-5
C236
810
RD/LG
810 RD/LG
C1050F
C1050M
151-8 E1
511 LG
C1050F
C1050M
SHIFT LOCK ACTUATOR
PAGE 37-1
810 RD/LG
S108
C210M
C210F
511 LG
151-2 A10
C1045M
810 RD/LG
810 RD/LG
810 RD/LG
C240c
C1027
C104a
12
92
SOLID STATE
15
GENERIC ELECTRONIC MODULE (GEM)
PAGE 59-7
POWERTRAIN CONTROL MODULE (PCM)
PAGES 22-10, 24-17, 25-17, 27-14
ANTI-LOCK BRAKE SYSTEM MODULE
PAGE 42-2
TRAILER STOP-LAMPS FEED
ALL OTHERS
CHASSIS CAB
C1045F
C1045F
511 LG
511 LG
151-10 F5
C401F
C401M
CENTER HIGH MOUNTED STOPLAMP
CENTER HIGH MOUNTED STOPLAMP
S201
676 PK/OG
S217
57 BK
SEE GROUNDS
PAGE 10-19
SEE GROUNDS
PAGE 10-20
G300
G202
B
C
TO C230b
PAGE 90-3