PIN	CIRCUIT	CIRCUIT FUNCTION
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Reference Voltage
91	359 (GY/RD)	Signal Return
92	810 (RD/LG)	Brake Pedal Position (BPP) Switch
93	387 (RD/WH)	Heated Oxygen Sensor #11 (HO2S) Heater
94	388 (YE/LB)	Heated Oxygen Sensor #21 (HO2S) Heater
95	389 (WH/BK)	Heated Oxygen Sensor #12 (HO2S) Heater
96	390 (TN/YE)	Heated Oxygen Sensor #22 (HO2S) Heater
97	361 (RD)	Vehicle Power (VPWR)
98	562 (LB)	Fuel Injector #8 Control
99	560 (LG/OG)	Fuel Injector #6 Control
100	558 (BN/LB)	Fuel Injector #4 Control
101	556 (WH)	Fuel Injector #2 Control
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

CONNECTOR REFERENCE LIST

CONNECTOR	SECTION-PAGE
C157	31-4
C182	29-5, 30-5
C183	29-5
C224	130-5
C236	62-6
C237	62-6
C267	59-6
C915	102-2

4.6L

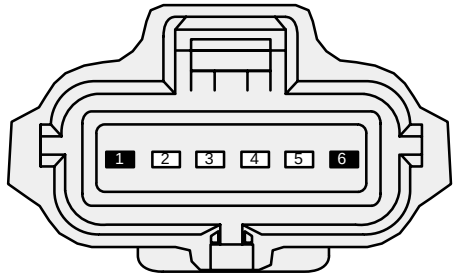

C141

MASS AIR FLOW (MAF) SENSOR

PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED
2	361 (RD)	Power (Hot in Start or Run)
3	570 (BK/WH)	Ground
4	968 (TN/LB)	MAF Sensor Signal Return
5	967 (LB/RD)	MAF Signal Out
6	–	NOT USED