Seat adjust switch, passenger side front

Schematic

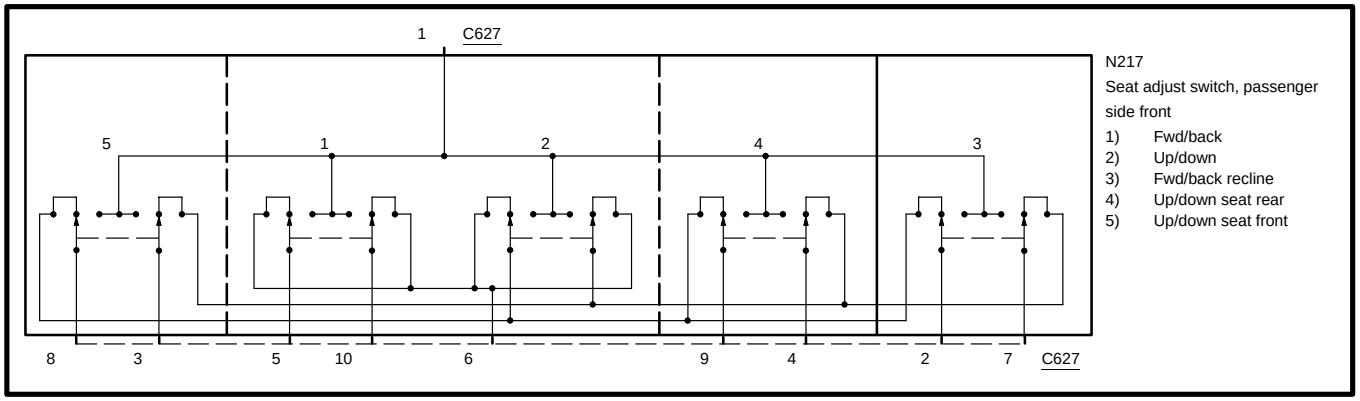

N217
Seat adjust switch, passenger side front

1) Fwd/back
2) Up/down
3) Fwd/back recline
4) Up/down seat rear
5) Up/down seat front

Terminals

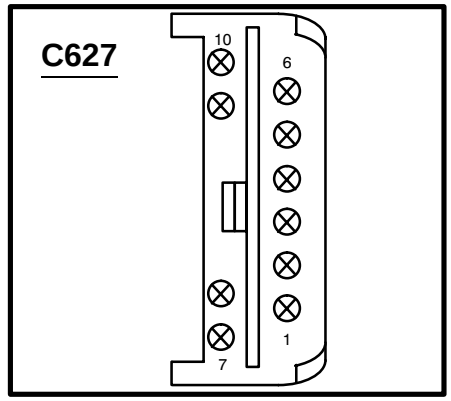

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Front up/down circuit	1 and 8	Up	Closed circuit
	1 and 3	Down	Closed circuit
Rear up/down circuit	1 and 9	Up	Closed circuit
	1 and 4	Down	Closed circuit
Forward/Rearward circuit	1 and 2	Forward	Closed circuit
	1 and 7	Rearward	Closed circuit
Entire seat circuit	1 and 10	Rearward	Closed circuit
	1 and 5	Forward	Closed circuit
	1 and 3	Down	Closed circuit
	1 and 4	Down	Closed circuit
	1 and 8	Up	Closed circuit
	1 and 9	Up	Closed circuit