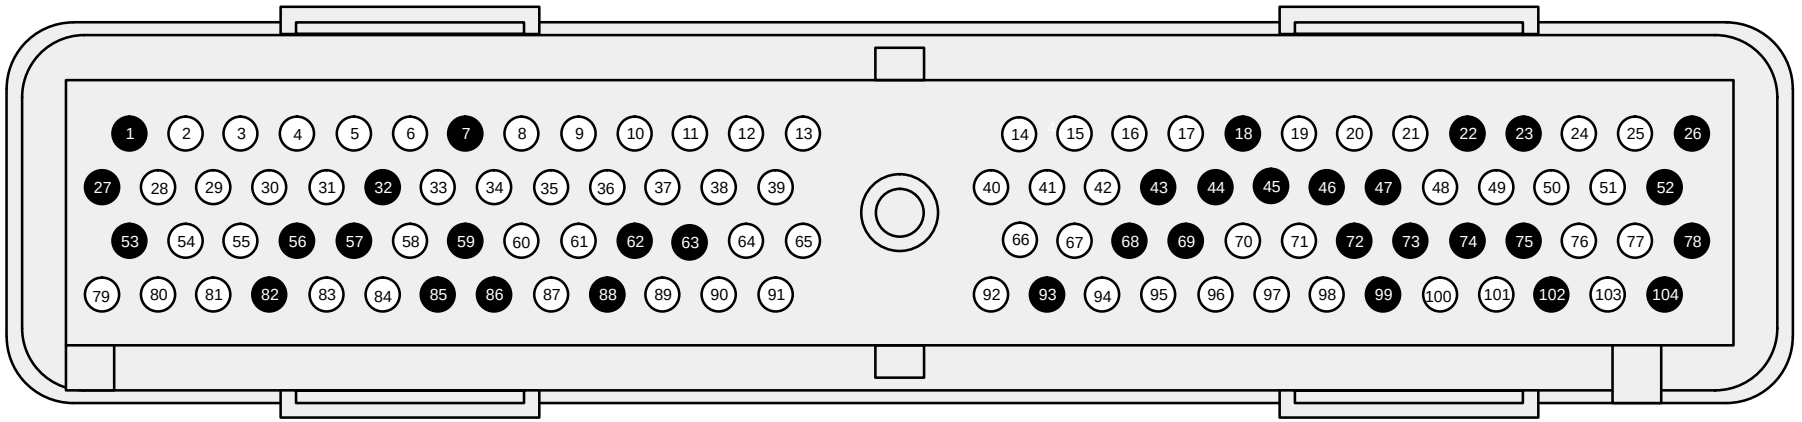

7.3L

C154

POWERTRAIN CONTROL MODULE (PCM)

*** CALIFORNIA**

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
1	–	NOT USED	19	648 (WH/PK)	CTO Tap
2	658 (PK/LG)	Check Engine Light	20	924 (BN/OG)	Coast Clutch Solenoid
3	3996 (RD/YE)	Manifold Intake Air Heater Relay	21	795 (DG)	Camshaft Position (CMP)Sensor
4	284 (OG)	NOT USED	22	–	NOT USED
5	162 (LG/RD)	Brake Warning Input **REVISED**	23	–	NOT USED
6	237 (OG/YE)	Shift Solenoid A	24	837 (YE/BK)	Accelerator Pedal (AP) Position Sensor
7	–	NOT USED	25	875 (BK/LB)	Ground
8	1278 (WH/VT)	Glow Plug Relay	26	–	NOT USED
	*1277 (WH/LG)	Glow Plug Control Module (GPCM)	27	–	NOT USED
9	1279 (WH)	Glow Plug Relay	28	643 (RD)	Water in Fuel Indicator
10	308 (RD/OG)	Idle Validation Switch	29	224 (TN/WH)	Transmission Control Switch
11	315 (VT/OG)	Shift Solenoid B	30	553 (VT/LB)	Exhaust Back Pressure (EBP) Sensor
12	911 (WH/LG)	Transmission Control Indicator Lamp (TCIL)	31	810 (RD/LG)	Brake Pressure Switch
13	107 (VT)	Generic Scan Tool Input	32	–	NOT USED
14	781 (OG/LB)	4×4 Tap	33	676 (PK/OG)	Vehicle Speed Sensor (VSS) Ground
15	915 (PK/LB)	Bus (–)	34	1277 (WH/LG)	Glow Plug Relay
16	914 (TN/OG)	Bus (+)	35	1183 (WH/YE)	Generator Power Switch
17	1012 (OG/BK)	Digital Transmission Range (DTR) Sensor (TR1)	36	1280 (GY/RD)	Fuel Line Heater
			37	923 (OG/BK)	Transmission Fluid Temperature (TFT) Sensor
18	–	NOT USED			

PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION	PIN	CIRCUIT	CIRCUIT FUNCTION
38	354 (LG/RD)	Engine Oil Temperature (EOT) Sensor	69	–	NOT USED	96	817 (YE/LB)	Cylinder Identification Signal Output
39	743 (GY)	Intake Air Temperature (IAT) Sensor	70	464 (BK/PK)	Wait to Start Output	97	361 (RD)	Power Input
40	787 (PK/BK)	Speed Control Ground	71	361 (RD)	Power Input	98	462 (PK)	Manifold Intake Air Heater Relay Enable Output
41	347 (BK/YE)	A/C ON Input Signal	72	–	NOT USED			
42	318 (GY/RD)	Exhaust Pressure Regulator	73	–	NOT USED			
43	–	NOT USED	74	–	NOT USED			
44	–	NOT USED	75	–	NOT USED	99	–	NOT USED
45	–	NOT USED	76	570 (BK/WH)	Ground	100	29 (YE/WH)	Fuel Pump Sender
46	–	NOT USED	77	570 (BK/WH)	Ground	101	1086 (VT/OG)	Glow plug Controller Output
47	–	NOT USED	78	–	NOT USED			
48	818 (GY/WH)	Electronic Feedback Input	79	358 (LG/BK)	(MAP) Sensor	102	–	NOT USED
49	146 (WH/PK)	Digital Transmission Range (DTR) Sensor (TR2)	80	814 (WH/BK)	(IDM) Enable Output	103	570 (BK/WH)	Ground
			81	925 (WH/YE)	Electronic Pressure Control (EPC) Solenoid	104	–	NOT USED
50	145 (GY/BK)	Digital Transmission Range (DTR) Sensor (TR4)	82	–	NOT USED			
51	570 (BK/WH)	Ground	83	552 (YE/RD)	Injection Pressure Regulator (IPR) Sensor			
52	–	NOT USED	84	970 (DG/WH)	Turbine Shaft Speed (TSS) Sensor			
53	–	NOT USED	85	–	NOT USED			
54	480 (VT/YE)	Torque Converter Clutch (TCC)Solenoid	86	–	NOT USED			
55	37 (YE)	Keep Alive Power Input	87	812 (DB/LG)	Injection Control Pressure (ICP) Sensor			
56	–	NOT USED	88	–	NOT USED			
57	–	NOT USED	89	355 (GY/WH)	Accelerator Pedal (AP) Position Sensor			
58	679 (GY/BK)	Vehicle Speed Sensor (VSS)	90	351 (BN/WH)	Reference Output Voltage			
59	–	NOT USED	91	359 (GY/RD)	Sensor Signal Return			
60	1185 (YE)	Generator Power Switch	92	511 (LG)	Brake Pedal Position (BPP) Switch			
61	151 (LB/BK)	Speed Control Ground Signal	93	–	NOT USED			
62	–	NOT USED	94	926 (LB/OG)	Fuel Pump Relay Enable Output			
63	–	NOT USED	95	821 (BN/OG)	Fuel Delivery Command Signal Output			
64	199 (LB/YE)	Digital Transmission Range (DTR) Sensor (TR3A)						
65	796 (LB)	Camshaft Position (CMP) Sensor Ground						
66	439 (TN/LG)	A/C Pressure Switch						
67	905 (GY/LB)	Battery						
68	–	NOT USED						