C504

14631

N447
Master window adjust switch (14529)

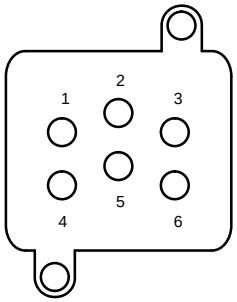

F06235

Pin	Circuit	Circuit function
1	992 (WH/BK)	Master window adjust switch (14529), feed, Up
2	400 (LB/BK)	Accessory relay, switched power, output
3	313 (WH/YE)	Window switch, feed, right front, Up
4	991 (TN/LB)	Master window adjust switch (14529), feed, Down
5	57 (BK)	Ground
6	314 (TN/LB)	Window switch, feed, right front, Down

C505

14631

N204
Door lock switch, driver side (14028)

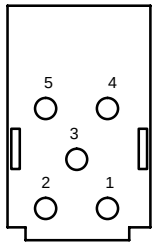

F05063

Pin	Circuit	Circuit function
1	120 (PK/LG)	Door unlock, control
2	–	not used
3	57 (BK)	Ground
4	–	not used
5	119 (PK/YE)	Door lock, control

C522

14631

M259
Exterior rear view mirror, left

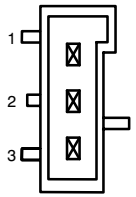

F03157

Pin	Circuit	Circuit function
1	540 (RD)	Right/Left mirror movement
2	541 (DB)	Up/Down mirror movement
3	945 (YE/BK)	Mirror motor, feed