PIN	CIRCUIT	CIRCUIT FUNCTION
76	–	NOT USED
77	570 (BK/WH)	Power Ground
78	1027 (PK/LB)	Coil on Plug #7
79	1029 (WH/RD)	Coil on Plug #8
80	926 (LB/OG)	Fuel Pump Control
81	925 (WH/YE)	Electronic Pressure Control (EPC)
82	–	NOT USED
83	264 (WH/LB)	Idle Air Control (IAC) Valve Output
84	136 (DB/YE)	Output Shaft Speed (OSS) Sensor (+)
85	282 (DB/OG)	Camshaft Position (CMP) Sensor Output
86	1154 (WH/BK)	A/C High Pressure Cutout Switch
87	94 (RD/BK)	LF Heated Oxygen Sensor (HO2S)
88	967 (LB/RD)	Mass Air Flow (MAF) Sensor
89	355 (GY/WH)	Throttle Position (TP) Sensor
90	351 (BN/WH)	Vehicle Reference Voltage
91	359 (GY/RD)	Signal Return
92	–	NOT USED
93	387 (RD/WH)	RF Heated Oxygen Sensor (HO2S)
94	388 (YE/LB)	LF Heated Oxygen Sensor (HO2S)
95	389 (WH/BK)	RR Heated Oxygen Sensor (HO2S)
96	390 (TN/YE)	LR Heated Oxygen Sensor (HO2S)
97	–	NOT USED
98	562 (LB)	Fuel Injector #8
99	560 (LG/OG)	Fuel Injector #6
100	558 (BN/LB)	Fuel Injector #4
101	556 (WH)	Fuel Injector #2
102	–	NOT USED
103	570 (BK/WH)	Power Ground
104	1026 (PK/WH)	Coil on Plug #2

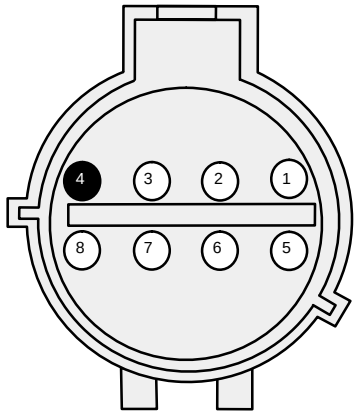

C464
FUEL TANK ASSEMBLY

PIN	CIRCUIT	CIRCUIT FUNCTION
1	351 (BN/WH)	Power to Engine Sensors
2	791 (RD/PK)	Fuel Tank Pressure Transducer to PCM
3	359 (GY/RD)	Sensor Signal Return
4	–	NOT USED
5	676 (PK/OG)	Ground
6	787 (PK/BK)	Fuel Pump Power
7	57 (BK)	Ground
8	29 (YE/WH)	Fuel Gauge to Fuel Gauge Sender