C2057

14401

Courtesy lamp,
right footwell

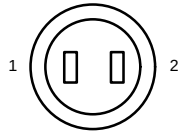

F02063

Pin	Circuit	Circuit function
1	53 (BK/LB)	courtesy lamps, feed
2	57 (BK)	Ground

C2075

14401

Accessory
delay relay

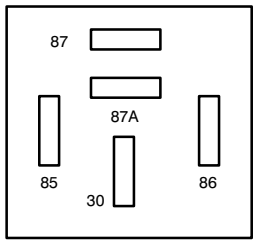

F05129

Pin	Circuit	Circuit function
30	517 (BK/WH)	Voltage supplied at all times (overload protected)
86	194 (PK)	Accessory delay relay, control
85	517 (BK/WH)	Voltage supplied at all times (overload protected)
87	193 (YE/LG)	Accessory delay relay, switched output
87A	–	not used

* without memory

C2089

14401

Adjustable
pedal switch

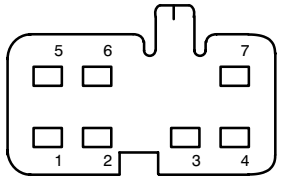

F07056

Pin	Circuit	Circuit function
1	1492 (LB/RD)	memory, Adjustable pedal switch, Rearward
	*1495 (RD)	Adjustable pedal switch, Rearward
2	797 (LG/VT)	Voltage supplied at all times (overload protected)
	*490 (RD)	
3	57 (BK)	Ground
4	57 (BK)	Ground
5	484 (OG/BK)	Instrument illumination, on input
6	57 (BK)	Ground
7	1493 (PK/BK)	memory, Adjustable pedal switch, Forward
	*1494 (WH)	Adjustable pedal switch, Forward

C2090

14A005

Adjustable
pedal memory
potentiometer

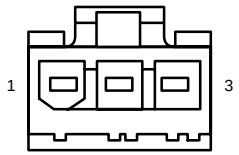

F03111

Pin	Circuit	Circuit function
1	955 (GY)	common
2	1491 (LB/YE)	Adjustable pedal memory potentiometer
3	958 (GY/RD)	feed