C526a (GY)

14631

Door ajar switch,
driver side front
(14018)

F01065

Pin	Circuit	Circuit function
1	765 (YE/BK)	Door ajar switch, left front

C526b (BK)

14631

Door ajar switch,
driver side front
(14018)

F01067

Pin	Circuit	Circuit function
1	57 (BK)	Ground

C527 (GY)

14631

Exterior rear view
mirror switch
(17B676)

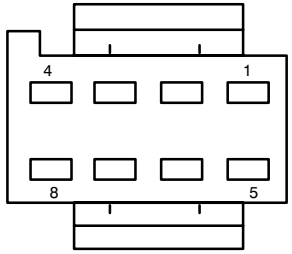

F08056

Pin	Circuit	Circuit function
1	540 (RD)	Right/Left mirror movement
2	543 (DG)	Voltage supplied at all times (overload protected)
3	–	not used
4	956 (OG/LG)	Voltage supplied at all times (overload protected)
5	544 (VT)	Up/Down mirror movement
6	541 (DB)	Up/Down mirror movement
7	945 (YE/BK)	Mirror motor, feed
	945 (YE/BK)	Mirror motor, feed
8	57 (BK)	Ground