C2112

19K315

N242
Power seat switch, driver

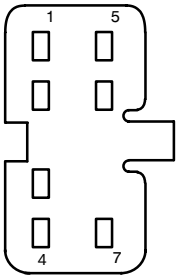

F07016

Pin	Circuit	Circuit Function
1	33-AH10 (YE/BK)	Switched between: Battery voltage, Ground or Open
2	29-AH14 (OG/YE)	Voltage supplied at all times (overload protected)
3	31-AH6 (BK)	Ground
4	–	not used
5	–	not used
6	31-AH6A (BK)	Ground
7	32-AH10 (WH/BK)	Switched between: Battery voltage, Ground or Open

C2113

14014

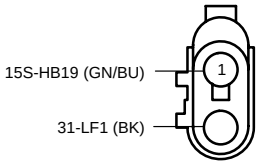

F02005

18C619

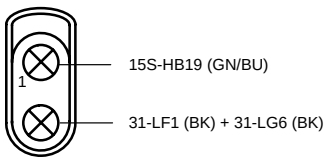

F02007

C2114 (GY)

14335

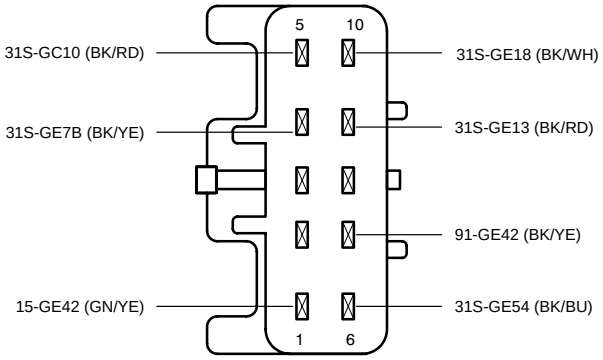

F10041

14K024

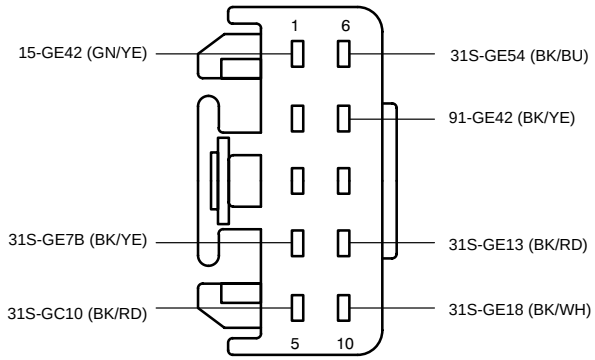

F10042

C2115

14K024

E28
Glove box lamp

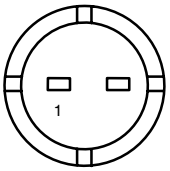

F02019

Pin	Circuit	Circuit Function
1	29S-LB8 (OG)	Voltage supplied at all times (overload protected), switched
2	31S-LB8 (BK/OG)	Ground, switched