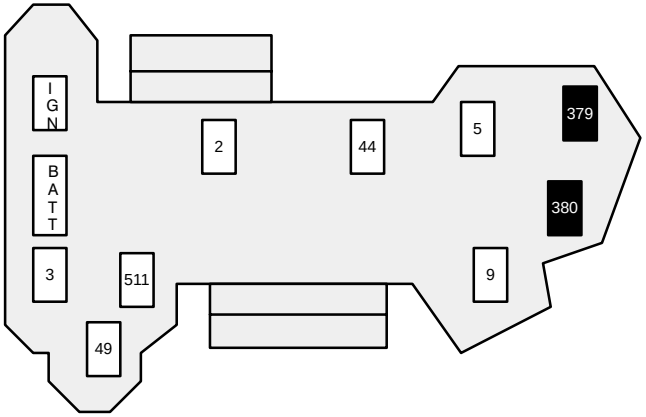

C230b (GRAY)

MULTIFUNCTION SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
2	2 (WH/LB)	Right Turn Indicator and Lamps
3	3 (LG/WH)	Left Turn Indicator and Lamps
5	5 (OG/LB)	Right Turn/Stop Lamps
9	9 (LG/OG)	Left Turn/Stop Lamps
44	44 (LB)	Turn Signal Flasher Input
49	49 (OG)	Turn Signal Flasher Input
379	–	NOT USED
380	–	NOT USED
511	511 (LG)	Stoplamp Input
BATT	10 (LG/RD)	Power (Hot at All Times)
IGN	1039 (BK/YE)	Power (Hot in Run)

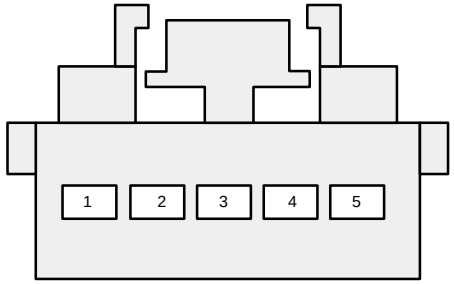

C279

BRAKE PEDAL POSITION SWITCH

PIN	CIRCUIT	CIRCUIT FUNCTION
1	1203 (BK/LB)	Ground
2	810 (RD/LG)	Brake Pedal Position (BPP) Switch to Stoplamps
3	22 (LB/BK)	Power (Hot at All Times)
4	511 (LG)	Stoplamps
5	10 (LG/RD)	Power (Hot at All Times)