C240d

14401

A220
Audio unit



F01049

C243

A144
CD changer

14401

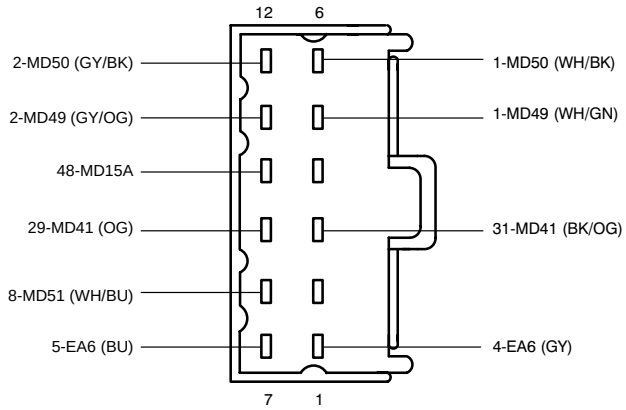

F12019

14401

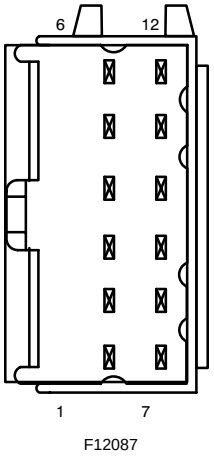

F12087

Pin	Circuit	Circuit Function
1	4-EA6 (GY)	Data link, bus positive
2	–	not used
3	31-MD41 (BK/OG)	Ground
4	–	not used
5	1-MD49 (WH/GN)	Audio signal positive
6	1-MD50 (WH/BK)	Audio signal positive
7	5-EA6 (BU)	Data link, bus negative

Pin	Circuit	Circuit Function
8	8-MD51 (WH/BU)	Sensor signal
9	29-MD41 (OG)	Voltage supplied at all times (overload protected)
10	48-MD15A	Drain wire
11	2-MD49 (GY/OG)	Audio signal negative
12	2-MD50 (GY/BK)	Audio signal negative