C504a (BU)

14A488

Master window adjust switch (14529)

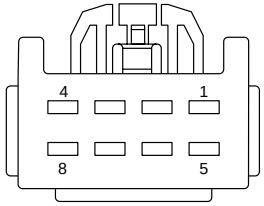

F08167

Pin	Circuit	Circuit function
1	–	not used
2	1205 (BK)	Ground
3	314 (TN/LB)	Window switch, feed, right front, Down
4	313 (WH/YE)	Window switch, feed, right front, Up
5	–	not used
6	400 (LB/BK)	Accessory relay, switched power, output
7	991 (TN/LB)	Master window adjust switch (14529), feed, Down
8	992 (WH/BK)	Master window adjust switch (14529), feed, Up

C504b (GY)

14A488

Master window adjust switch (14529)

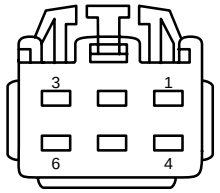

F06213

Pin	Circuit	Circuit function
1	–	not used
2	320 (RD/BK)	Window switch, feed, right rear, Down
3	319 (YE/BK)	Window switch, feed, right rear, Up
4	170 (RD/LB)	Window lockout, switched power, output
5	317 (GY/OG)	Window switch, feed, left rear, Down
6	316 (YE/LB)	Window switch, feed, left rear, Up