C4089

14405

Emergency flasher relay 2

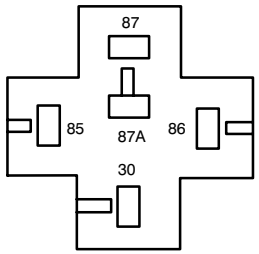

F05165

Pin	Circuit	Circuit function
30	40 (LB/WH)	Voltage supplied at all times (overload protected)
85	57 (BK)	Ground
86	5 (OG/LB)	Turn lamps, feed, right rear
87	5 (OG/LB)	to right package tray lamp
87A	–	not used

C4112

13407/13410

Park/stop/turn lamp 1, left rear

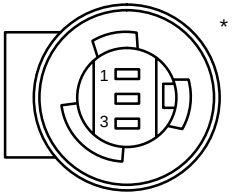

* Crown Victoria

F03113

Pin	Circuit	Circuit function
1	*511 (LG)	Brake pedal position switch (13480), to stoplamps
	5 (OG/LB)	Turn lamps, feed, left rear
2	14 (BN)	Power, Exterior lamps
3	57 (BK)	Ground

C4113 (BK)

13407/13410

Park/stop/turn lamp 2, left rear

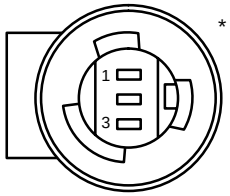

* Crown Victoria

F03113

Pin	Circuit	Circuit function
1	*511 (LG)	Brake pedal position switch (13480), to stoplamps
	5 (OG/LB)	Turn lamps, feed, left rear
2	14 (BN)	Power, Exterior lamps
3	57 (BK)	Ground

C4114 (BK)

13407/13410

Park/stop/turn lamp 1, right rear

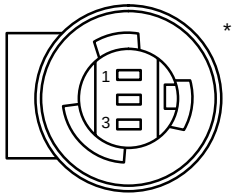

* Crown Victoria

F03113

Pin	Circuit	Circuit function
1	*511 (LG)	Brake pedal position switch (13480), to stoplamps
	5 (OG/LB)	Turn lamps, feed, right rear
2	14 (BN)	Power, Exterior lamps
3	57 (BK)	Ground

C4115

13407/13410

Park/stop/turn lamp 2, right rear

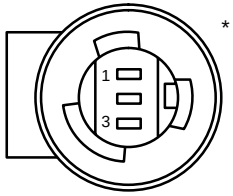

* Crown Victoria

F03113

Pin	Circuit	Circuit function
1	*511 (LG)	Brake pedal position switch (13480), to stoplamps
	5 (OG/LB)	Turn lamps, feed, right rear
2	14 (BN)	Power, Exterior lamps
3	57 (BK)	Ground