C398

14A005

N430
Sliding door ajar switch, right

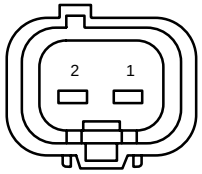

F02281

Pin	Circuit	Circuit function
1	1433 (DB/LG)	Sliding door ajar switch, right, signal
2	1205 (BK)	Ground

C399

14A005

N431
Sliding door contact switch, left

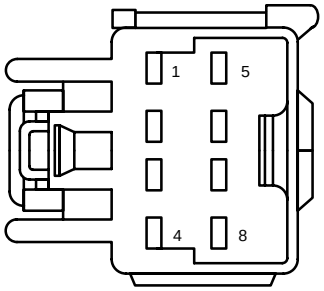

F08213

Pin	Circuit	Circuit function
1	1251 (YE/RD)	Power sliding door motor, return
2	–	not used
3	1227 (WH)	Detent switch, RH, to, Module, power sliding door, RH side
4	1252 (GY/RD)	Module, power sliding door, RH side, to, Latch/unlatch motor, LH
5	800 (GY/LB)	Speaker, left rear (18808) +
	827 (TN/WH)	Speaker, left rear (18808) +
6	1387 (VT)	Power sliding door unit, LH side, Door lock actuator, Lock
7	1388 (GY)	Power sliding door unit, LH side, Door lock actuator, Unlock
8	801 (TN/YE)	Speaker, left rear (18808) –

C402a

14A583

R19
Rear window defrost grid (18C618)

F01029

Pin	Circuit	Circuit function
1	1205 (BK)	Ground

C402b

14A583

R19
Rear window defrost grid (18C618)

F01029

Pin	Circuit	Circuit function
1	186 (BN/LB)	Rear window defrost relay, switched power