## C457

**14086**

Liftgate lock actuator

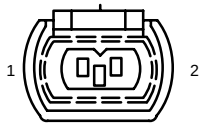


F02116

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 118 (PK/OG) | Door lock, output |
| 2 | 117 (PK/BK) | Door unlock, output |

## C458

**14086**

Liftgate ajar switch, left

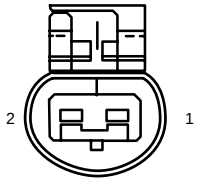


F02523

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 700 (WH/VT) | Anti–theft, switch sense |
| 2 | 23 (TN/LG) | Liftgate ajar switch, input |

## C459

**14086**

Liftgate ajar switch, right

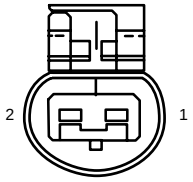


F02523

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 700 (WH/VT) | Anti–theft, switch sense |
| 2 | 57 (BK) | Ground |

## C461 (GY)

**13A409**

Reversing lamp, right (13411)

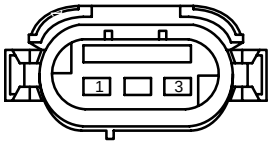


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 140 (BK/PK) | Voltage supplied in reverse |

## C462

**14405 Excursion**
**13412 Pickup**

License plate lamp, right

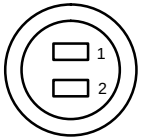


F02086

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 14 (BN) | lamp feed |
| 2 | 57 (BK) | Ground |