C381

14A699

A233
Safety belt assembly, left

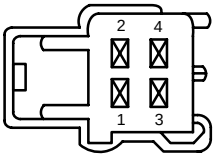

F04105

Pin	Circuit	Circuit Function
1	1079 (LG/RD)	Driver safety belt retractor pretensioner, feed
2	85 (BN/LB)	Safety belt buckle switch, input
3	1080 (LG/BK)	Driver safety belt retractor pretensioner, return
4	649 (BK/OG)	dedicated ground

C387

14A005

A229
Power antenna module

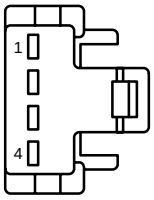

F04145

Pin	Circuit	Circuit Function
1	543 (DG)	Voltage supplied at all times (overload protected)
2	745 (RD/PK)	Antenna
3	655 (RD/OG)	Rear Control Unit (RCU), to antenna
4	57 (BK)	Ground

C388a

14A005

A230
Rear Control Unit (RCU)

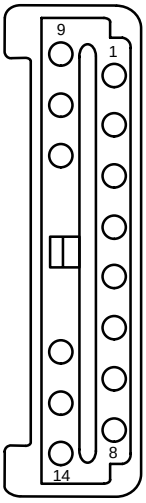

F14015

Pin	Circuit	Circuit Function
1	803 (BN/PK)	Speaker, right rear -
2	802 (OG/RD)	Speaker, right rear +
3	811 (DG/OG)	Speaker, right front -
4	805 (WH/LG)	Speaker, right front +
5	801 (TN/YE)	Speaker, left rear -
6	800 (GY/LB)	Speaker, left rear +
7	813 (LB/WH)	Speaker, left front -
8	804 (OG/LG)	Speaker, left front +
9	–	not used
10	745 (RD/PK)	Antenna
11	–	not used
12	694 (BK/LG)	Ground
13	694 (BK/LG)	Ground
14	720 (RD/YE)	Voltage supplied at all times (overload protected)