Pickup

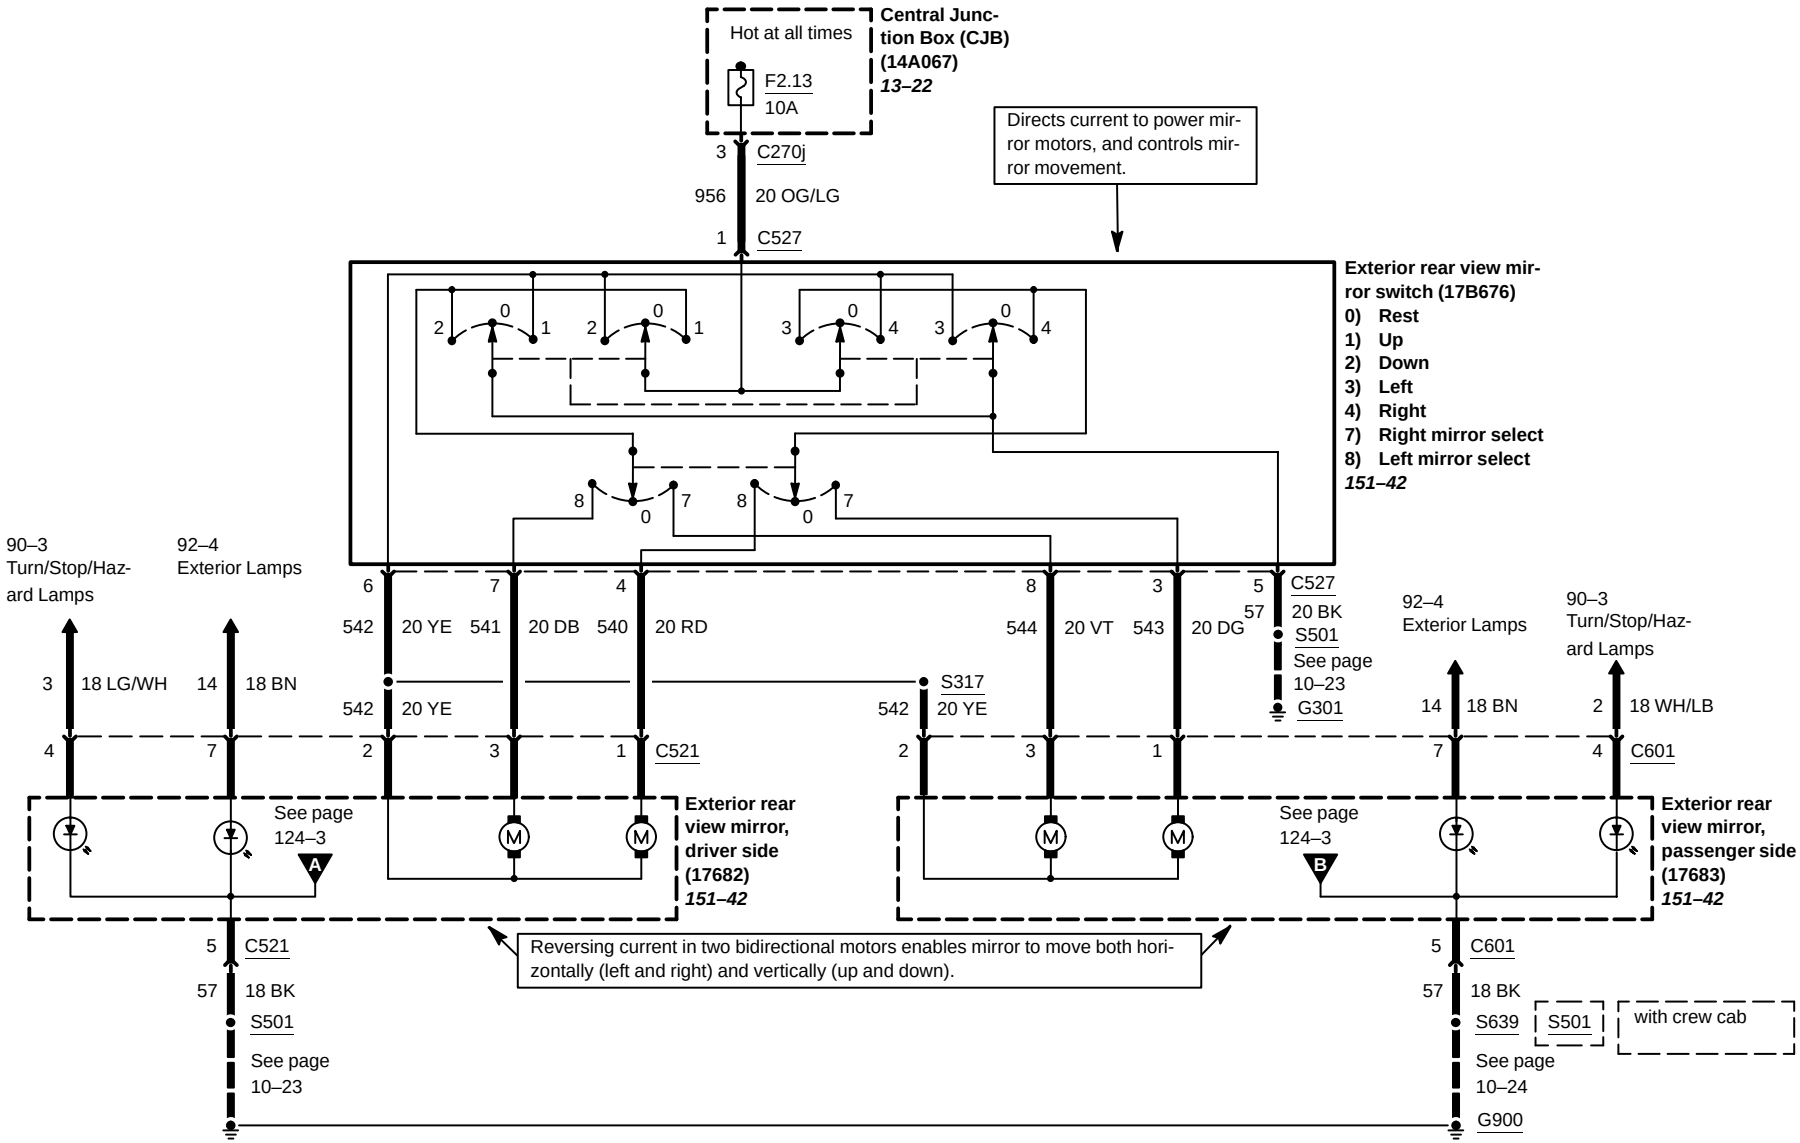
Hot at all times
Central Junction Box (CJB) (14A067) 13–22
F2.13
10A
3 C270j
956 20 OG/LG
1 C527
Directs current to power mirror motors, and controls mirror movement.
Exterior rear view mirror switch (17B676)
0) Rest
1) Up
2) Down
3) Left
4) Right
7) Right mirror select
8) Left mirror select
151–42
90–3 Turn/Stop/Hazard Lamps
92–4 Exterior Lamps
3 18 LG/WH
14 18 BN
542 20 YE
541 20 DB
540 20 RD
544 20 VT
543 20 DG
5 C527
57 20 BK
S501
See page 10–23
G301
S317
542 20 YE
92–4 Exterior Lamps
90–3 Turn/Stop/Hazard Lamps
14 18 BN
2 18 WH/LB
C521
C601
See page 124–3
A
B
Exterior rear view mirror, driver side (17682) 151–42
Exterior rear view mirror, passenger side (17683) 151–42
Reversing current in two bidirectional motors enables mirror to move both horizontally (left and right) and vertically (up and down).
5 C521
57 18 BK
S501
See page 10–23
5 C601
57 18 BK
S639
S501
with crew cab
See page 10–24
G900