C527

14A005

N409
Exterior rear view mirror switch
(17B676)

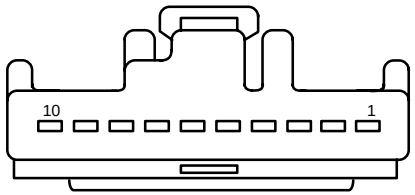

F10087

Pin	Circuit	Circuit function
1	942 (RD/OG)	Left mirror, Right/Left mirror movement, position, Sensor
2	944 (DG/OG)	Power mirror switch, horizontal sense, Right
3	797 (LG/VT)	Voltage supplied at all times (overload protected)
4	945 (YE/BK)	Mirror motor, feed
5	57 (BK)	Ground
6	484 (OG/BK)	Headlamp switch, on input
7	57 (BK)	Ground
8	943 (VT/OG)	Right mirror, Mirror motor, Right/Left mirror movement
9	940 (DB/OG)	Left mirror, Right/Left mirror movement, position, Sensor
10	–	not used

C538

14A005

N274
Seat heater switch, driver side

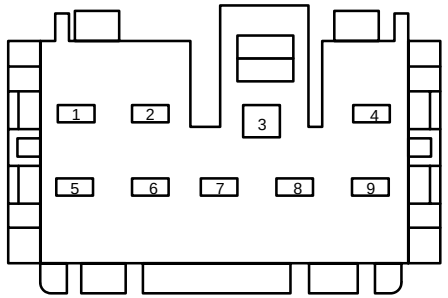

FF09029

Pin	Circuit	Circuit function
1	484 (OG/BK)	Headlamp switch, on input
2	1040 (RD/BK)	Voltage in Run (overload protected)
3	–	not used
4	57 (BK)	Ground
5	57 (BK)	Ground
6	1020 (DG/VT)	Climate controlled seat module
7	461 (OG)	Electronic Automatic Temperature Control (EATC) module (19980), to, Heated seat module, driver side front
8	1018 (LG/OG)	Heated seat switch, driver side, Temperature (+)
9	1019 (TN/LB)	Heated seat switch, driver side, Temperature (–)

C534

14631

N434
Luggage compartment lid release switch



F02185

Pin	Circuit	Circuit function
1	26 (WH/VT)	Tailgate/decklid anti–theft inhibit switch
2	797 (LG/VT)	Voltage supplied at all times (overload protected)

C602a

14A005

N240
Door ajar switch, passenger side front
(14018)



F01053

Pin	Circuit	Circuit function
1	627 (BK/OG)	Door ajar indicator, control