C2031

14401

R42
Cigar lighter, front
(15055)

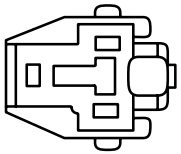

F03163

Pin	Circuit	Circuit function
1	40 (LB/WH)	Cigar lighter, feed
2	–	not used
3	57 (BK)	Ground

C2033

14401

N251
Power point
(19N236)

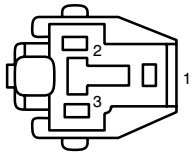

F03163

Pin	Circuit	Circuit function
1	1049 (BN/PK)	Voltage supplied at all times (overload protected)
2	–	not used
3	57 (BK)	Ground

C2047

14401

K2
Indicator flasher
relay (13350)

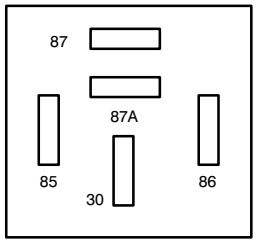

F05129

Pin	Circuit	Circuit function
30	1039 (BK/YE)	Voltage in Run (overload protected)
85	383 (RD/WH)	Emergency warning flasher, feed
86	57 (BK)	Ground
87	44 (LB)	Turn signal flasher, to turn signal switch
87A	–	not used