Seat adjust switch, passenger side front

Schematic

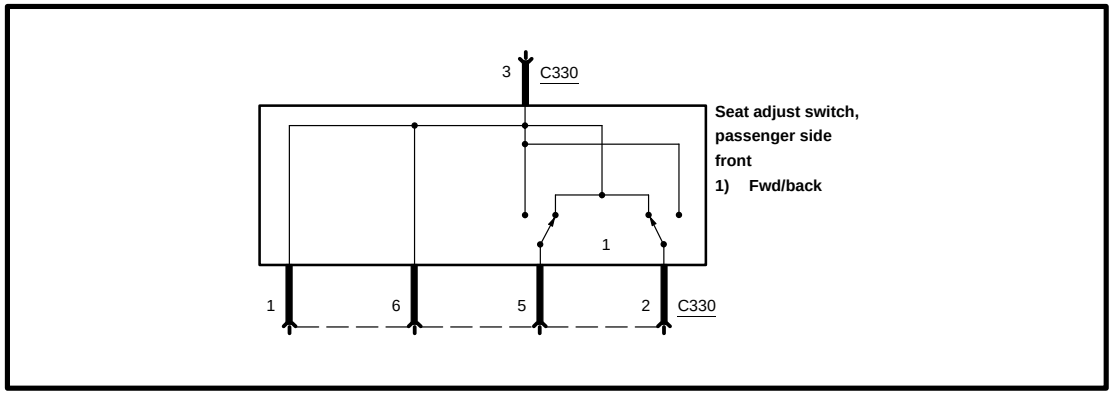

Terminals

C330

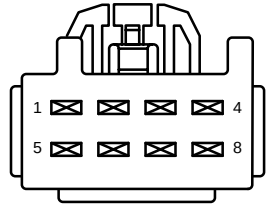

F08193

Component testing procedure

Circuit to test	Connect self–powered test light or ohm-meter to terminals	Move switch to these positions	A good switch will indicate
Forward/Rearward circuit	3 and 5	Rest /Rearward	Open circuit
		Forward	Closed circuit
	3 and 2	Rest /Forward	Closed circuit
		Rearward	Open circuit