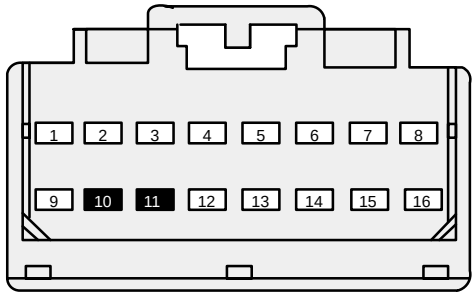

C506

DRIVER DOOR MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	983 (RD/LG)	Seat Reg. Switch to Front Motor LH Up
2	982 (YE/LG)	Seat Reg. Switch to Rear Motor LH Down
3	918 (GY)	Seat Reg. Switch to Recliner Motor Up
4	919 (GY/BK)	Seat Reg. Switch to Recliner Motor Down
5	979 (RD/LB)	Seat Reg. Switch to Front Motor LH Up
6	978 (YE/LB)	Seat Reg. Switch to Front Motor LH Down
7	981 (RD/WH)	Seat Reg. Switch to Horizontal Motor LH Fwd
8	980 (YE/WH)	Seat Reg. Switch to Horizontal Motor LH Back
9	651 (BK/YE)	Luggage Compartment Lid Release Switch Ground Input
10	–	NOT USED
11	–	NOT USED
12	945 (YE/BK)	Mirror Switch Common
13	944 (DG/OG)	Mirror Switch Horizontal Right
14	942 (RD/OG)	Mirror Switch Horizontal Left
15	943 (VT/OG)	Mirror Switch Vertical Right
16	940 (DB/OG)	Mirror Switch Vertical Left

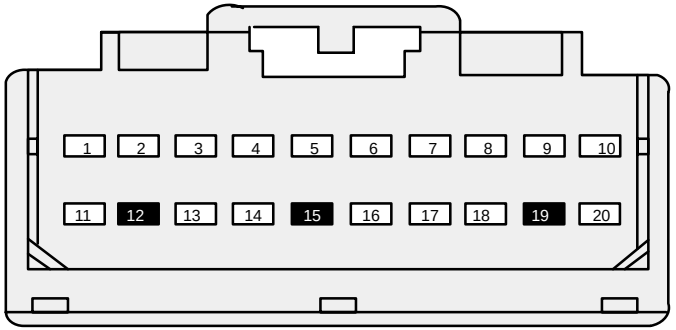

C523

DRIVER DOOR MODULE

PIN	CIRCUIT	CIRCUIT FUNCTION
1	316 (YE/LB)	LR Window Control Up
2	317 (GY/OG)	LR Window Control Down
3	121 (YE/BK)	Keyless Entry 5/6
4	122 (YE)	Keyless Entry 7/8
5	314 (TN/LB)	RF Window Control Up
6	313 (WH/YE)	RF Window Control Down
7	320 (RD/BK)	RR Window Control Up
8	319 (YE/BK)	RR Window Control Down
9	120 (PK/LG)	Door Lock Switch (Unlock)
10	170 (RD/LB)	Window Lock Control Switch
11	66 (LB)	Keypad Illumination
12	–	NOT USED
13	123 (RD)	Keyless Entry 9/0
14	79 (LG/RD)	Keyless Entry 3/4
15	–	NOT USED
16	78 (LB/YE)	Keyless Entry 1/2
17	119 (PK/YE)	Door Lock Switch (Lock)
18	25 (DG/VT)	Anti-Theft Disarm Switch Input
19	–	NOT USED
20	867 (DB)	Driver Door Ajar Switch Input