C608 (BK)

14630

Power window motor, passenger side front (23394)

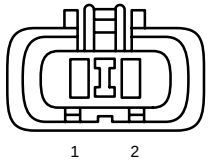

F02225

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	1159 (WH/LB)	Window motor, feed, Up

C612 (BK)

14630

Speaker, right front (18808)

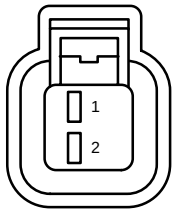

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) -

C613 (GY)

14630

Tweeter, right front

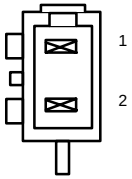

F02335

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) -
	811 (DG/OG)	Speaker, right front (18808) -

C701 (GY)

14633

Window adjust switch, left rear (14A412)

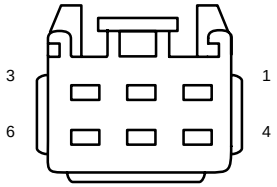

F06214

Pin	Circuit	Circuit function
1	317 (GY/OG)	Window switch, feed, left rear, Down
2	334 (RD/YE)	Window motor, feed, Down
3	170 (RD/LB)	Window lockout, switched power, output
4	–	not used
5	1159 (WH/LB)	Window motor, feed, Up
6	316 (YE/LB)	Window switch, feed, left rear, Up

C703 (BK)

14633

Power window motor, left rear (23394)

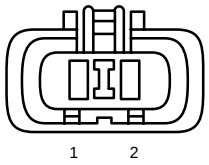

F02225

Pin	Circuit	Circuit function
1	334 (RD/YE)	Window motor, feed, Down
2	1159 (WH/LB)	Window motor, feed, Up