C501a

* except limousine

14A005

Driver Door Module

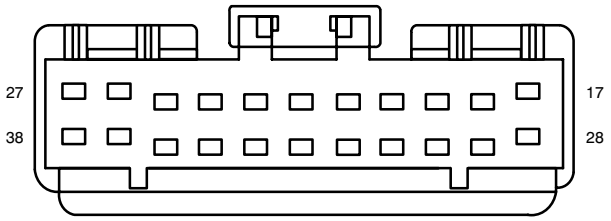

F22006

Pin	Circuit	Circuit function
17	118 (PK/OG)	Unlock
18	*945 (YE/BK)	common
19	*940 (DB/OG)	Left mirror, Right/Left mirror movement, position, Sensor
20	*270 (BN/OG)	Memory set switch (14776) Set
21	*267 (BN/LG)	Memory seat switch, position 1
22	119 (PK/YE)	Lock
23	676 (PK/OG)	Ground
24	–	not used
25	–	not used
26	171 (BK/WH)	Voltage supplied at all times (overload protected)
27	57 (BK)	Ground
28	1237 (LG/RD)	signal, Open, closed
29	797 (LG/VT)	Voltage supplied at all times (overload protected)
30	*942 (RD/OG)	Left mirror, Right/Left mirror movement, position, Sensor
31	*943 (VT/OG)	Right mirror, Mirror motor, Right/Left mirror movement
32	*944 (DG/OG)	Right mirror, Mirror motor, Right/Left mirror movement
33	*268 (BK/OG)	Memory seat switch, position 2
34	120 (PK/LG)	Unlock
35	914 (TN/OG)	SCP Bus +
36	915 (PK/LB)	SCP Bus –
37	163 (RD/OG)	driver door, Unlock
38	117 (PK/BK)	Lock

C501b

* except limousine

14A005

Driver Door Module

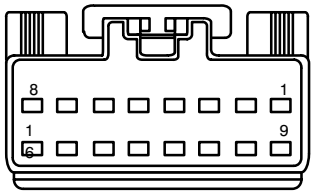

F16073

Pin	Circuit	Circuit function
1	78 (LB/YE)	Key pad, output A
2	26 (WH/VT)	Luggage compartment lid release switch
3	627 (BK/OG)	Door ajar indicator, control
4	867 (DB)	Door ajar switch, driver side front (14018)
5	*982 (YE/LG)	Rear height motor, Down
6	*983 (RD/LG)	Rear height motor, Up
7	*979 (RD/LB)	Front height motor, Up
8	*978 (YE/LB)	Front height motor, Down
9	121 (YE/BK)	Key pad, output C
10	–	not used
11	*272 (WH/OG)	Memory set switch (14776), Illumination, input
12	79 (LG/RD)	Key pad, output B
13	*918 (GY)	Driver seat backrest motor, Forward
14	*919 (GY/BK)	Driver seat backrest motor, Rearward
15	*981 (RD/WH)	Fwd/Rwd motor, Forward
16	*980 (YE/WH)	Fwd/Rwd motor, Rearward

C501c

14A005

Driver Door Module

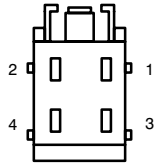

F04137

Pin	Circuit	Circuit function
1	605 (RD)	Luggage compartment lid release solenoid (5443252), signal
2	–	not used
3	171 (BK/WH)	Voltage supplied at all times (overload protected)
4	66 (LB)	Key pad illumination