C612 (BK)

19A041/14630

Speaker, right front (18808)

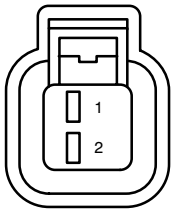

F02069

Pin	Circuit	Circuit function
1	805 (WH/LG)	Speaker, right front (18808) +
2	811 (DG/OG)	Speaker, right front (18808) –

C622 (GY)

14630

Exterior rear view mirror, right

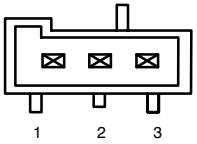

F03157

Pin	Circuit	Circuit function
1	543 (DG)	Voltage supplied at all times (overload protected)
2	544 (VT)	Up/Down mirror movement
3	945 (YE/BK)	Mirror motor, feed

C702 (BK)

14334/19A044/13A724

Speaker, left rear (18808)

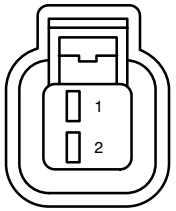

F02069

Pin	Circuit	Circuit function
1	800 (GY/LB)	Speaker, left rear (18808) +
2	801 (TN/YE)	Speaker, left rear (18808) –

C710 (GY)

14334

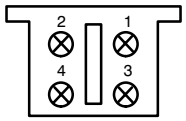

F04271

(1) 800 (GY/LB)
(2) 760 (PK/LB)
(3) 801 (TN/YE)
(4) 57 (BK)

19A044



F04271

(1) 800 (GY/LB)
(2) 759 (LG/YE)
(3) 801 (TN/YE)
(4) 57 (BK)

C715 (BK)

19A044

Door ajar switch, driver side rear (14018)

Early production

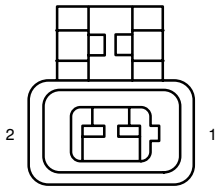

F02117

Late production

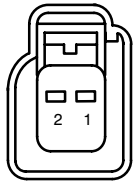

F02132

Pin	Circuit	Circuit function
1	759 (LG/YE)	Door ajar switch, left rear
2	57 (BK)	Ground