C197b

14300

Starter motor
(11002)

Pin	Circuit	Circuit function
1	2037 (RD)	Starter relay (11450), output

C202a

14401

Multifunction switch
(13K359)

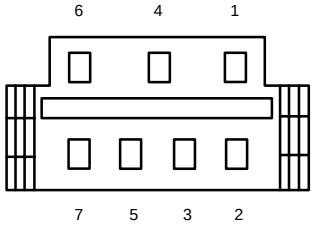

Pin	Circuit	Circuit function
1	589 (OG)	Wiper/washer switch, wiper speed circuit
2	15 (RD/YE)	Power, Hot with Headlamps on
3	13 (RD/BK)	Power, Hot with Low Beams on
4	993 (BN/WH)	Wiper Control Module (WCM), feed, to, Wiper/washer switch
5	632 (GY/OG)	Power, Hot with High Beams on
6	590 (DB/WH)	Wiper/washer switch, Intermittent wiper circuit
7	196 (DB/OG)	Voltage supplied at all times (overload protected)

C202b

14401

Multifunction switch
(13K359)

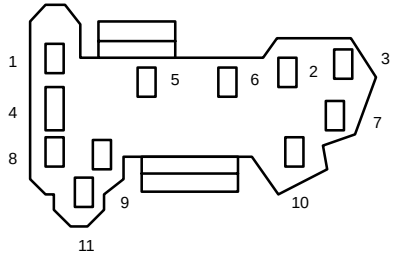

Pin	Circuit	Circuit function
1	1039 (BK/YE)	Voltage in Run (overload protected)
2	5 (OG/LB)	Turn lamps, feed, right rear
3	–	not used
4	10 (LG/RD)	Voltage supplied at all times (overload protected)
5	2 (WH/LB)	Turn lamps, feed, right front
6	44 (LB)	Electronic flasher module, to turn signal switch
7	–	not used
8	3 (LG/WH)	Turn lamps, feed, left front
9	511 (LG)	Brake pedal position switch (13480), to stoplamps
10	9 (LG/OG)	Turn lamps, feed, left rear
11	49 (OG)	Turn signal switch, to, Electronic flasher module