## C435 (GY)

**14405**

Fuel tank pressure transducer sensor (9C968)

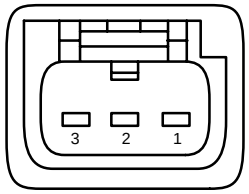


F03161

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 351 (BN/WH) | Reference, voltage |
| 2 | 359 (GY/RD) | signal, return |
| 3 | 791 (RD/PK) | Fuel tank pressure transducer sensor (9C968) |

## C439 (BK)

**14405**

Trailer tow connector (15A416)




F04409

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 206 (WH) | Trailer tow connector (15A416), Ground |
| 2 | 962 (BN/WH) | Trailer tow relay, switched output |
| 3 | 52 (YE) | Turn lamps, feed, left rear |
| 4 | 64 (DG) | Turn lamps, feed, right rear |

## C450 (BK)

**14405**

Evaporative emission (EVAP) canister vent valve (9F945)

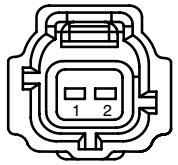


F02101

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 34 (LB/OG) | Voltage supplied in Start and Run (overload protected) |
| 2 | 91 (VT/WH) | Canister vent |

## C451

**13A409** (GN)
***14A005** (GY)

* Sport

Reversing lamp, left (13411)

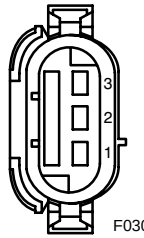


F03099

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 57 (BK) | Ground |
| 2 | – | not used |
| 3 | 140 (BK/PK) | Voltage supplied in reverse |

## C452 (GY)

**14A584**

License plate lamp, left




F02073

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 109 (VT/WH) | Power, Exterior lamps |
| | 109 (VT/WH) | Power, Exterior lamps |
| 2 | 57 (BK) | Ground |

## C454 (WH)

**14405**

License plate lamp, left

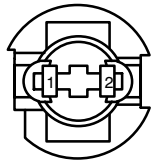


F02619

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 14 (BN) | Power, Exterior lamps |
| 2 | 57 (BK) | Ground |