## C1007

### 12A581

K26
Fog lamp relay

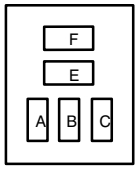


F05064

| Pin | Circuit | Circuit function |
|---|---|---|
| A | 275 (YE) | Fog lamp switch to Fog lamp relay |
| B | – | not used |
| C | 57 (BK) | Ground |
| E | 478 (TN/LG) | Fog lamp switch, to front fog lamp |
| F | 474 (LG/OG) | Fog lamp relay, control |

## C1008

### 12A581

K107
A/C clutch relay

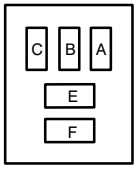


F05064

| Pin | Circuit | Circuit function |
|---|---|---|
| 1 | 331 (PK/YE) | A/C clutch relay, control |
| 2 | – | not used |
| 3 | 391 (RD/YE) | Voltage supplied in Start and Run (overload protected) |
| 4 | 321 (GY/WH) | A/C clutch relay, switched output |
| 5 | 883 (PK/LB) | Voltage supplied at all times (overload protected) |

## C1010 (BN)

### 14401

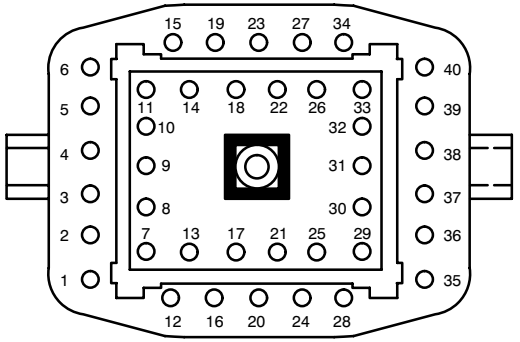


F40003

### 12A581

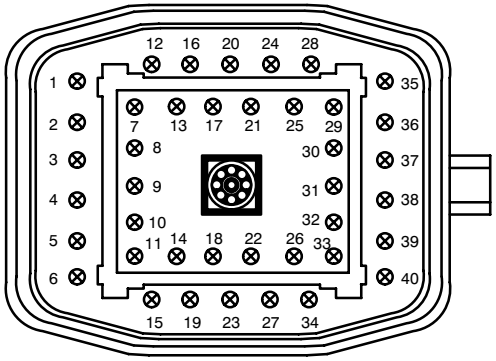


F40002

| | | | | | | | |
|---|---|---|---|---|---|---|---|
| (1) | 37 (YE) | (11) | 295 (LB/PK) | (21) | 687 (GY/YE) | (31) | 151 (LB/BK) |
| (2) | 671 (LB) | (12) | 959 (GY) | (22) | 348 (VT ) | (32) | |
| (3) | 50 (RD) | (13) | 591 (LG) | (23) | 81 (RD/LG) | (33) | 2/ (WH/LB) |
| (4) | 1050 (LG/VT) | (14) | 10 (LG/RD) | (24) | 1629 (PK/LG) | (34) | |
| (5) | 170 (RD/LB) | (15) | 679 (GY/BK) | (25) | 160 (DB/WH) | (35) | 364 (BK/LG) |
| (6) | 185 (BK) | (16) | 700 (WH/VT) | (26) | 3 (LG/WH) | (36) | 1052 (TN/BK) |
| (7) | 647 (GY/LB) | (17) | 53 (BK/LB) | (27) | 1114 (BN/PK) | (37) | |
| (8) | 646 (YE/WH) | (18) | 810 (RD/LG) | (28) | 1628 (WH/RD) | (38) | 566 (DG) |
| (9) | 686 (TN/RD) | (19) | 512 (TN/LG) | (29) | 570 (BK/WH) | (39) | 12 (LG/BK) |
| (10) | 1000 (RD/BK) | (20) | 640 (RD/YE) | (30) | 848 (DG/OG) | (40) | 517 (BK/WH) |