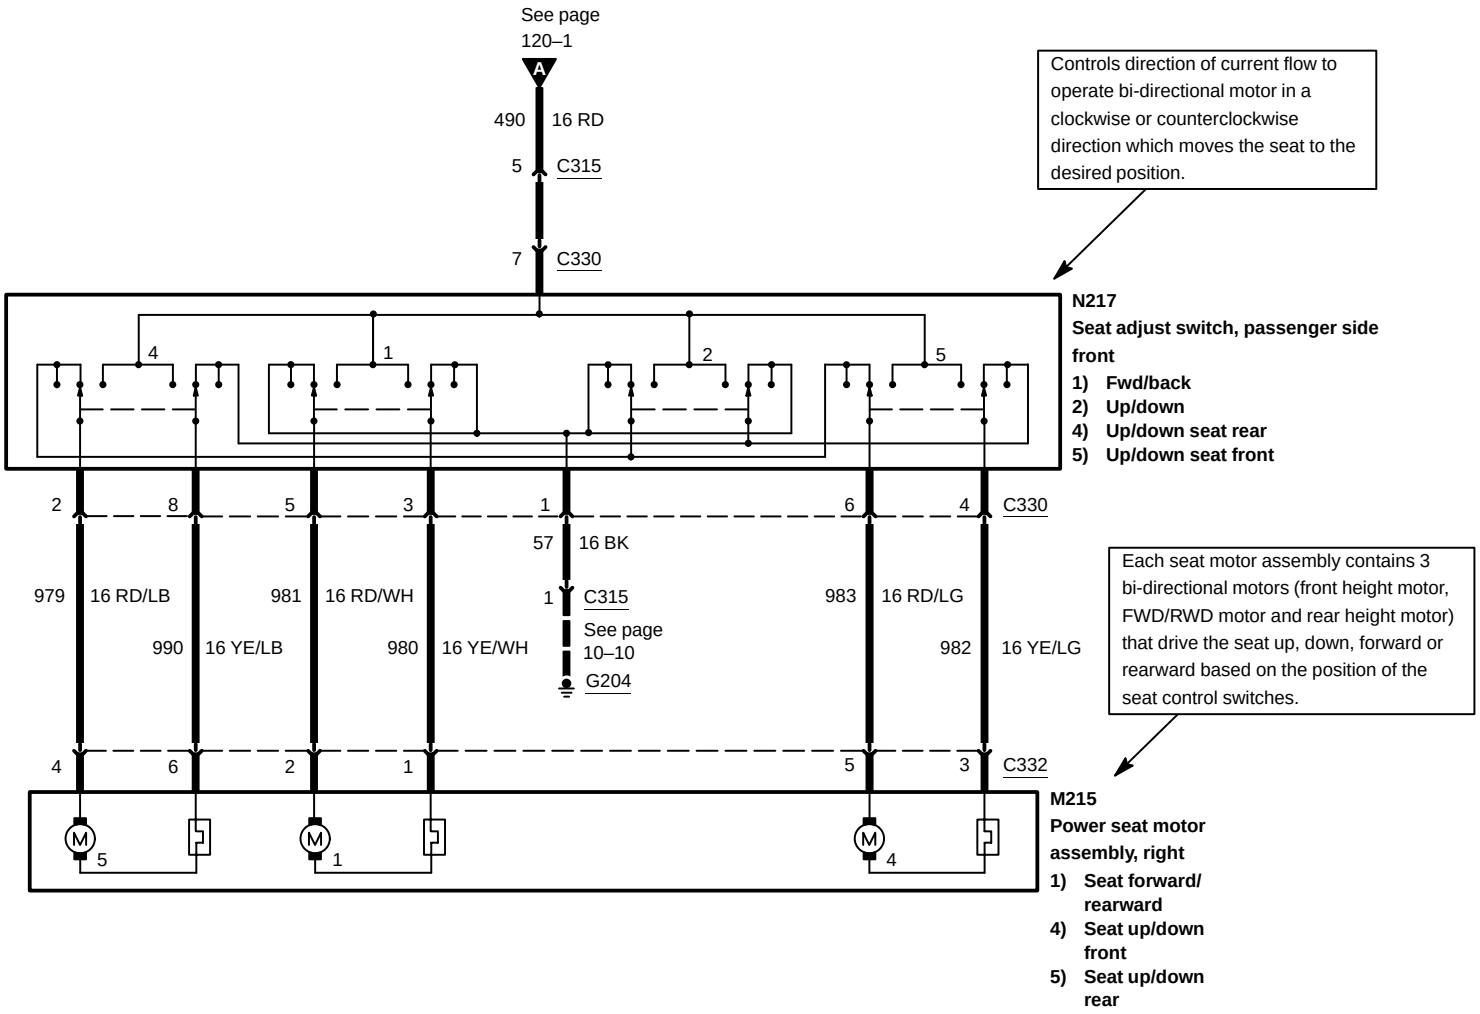
See page 120–1
A
490 16 RD
5 C315
7 C330
Controls direction of current flow to operate bi-directional motor in a clockwise or counterclockwise direction which moves the seat to the desired position.
N217
Seat adjust switch, passenger side front
1) Fwd/back
2) Up/down
4) Up/down seat rear
5) Up/down seat front
4
1
2
5
2 8 5 3 1 6 4 C330
57 16 BK
979 16 RD/LB
981 16 RD/WH
1 C315
See page 10–10
G204
983 16 RD/LG
990 16 YE/LB
980 16 YE/WH
982 16 YE/LG
Each seat motor assembly contains 3 bi-directional motors (front height motor, FWD/RWD motor and rear height motor) that drive the seat up, down, forward or rearward based on the position of the seat control switches.
4 6 2 1 5 3 C332
M
5
1
4
M215
Power seat motor assembly, right
1) Seat forward/ rearward
4) Seat up/down front
5) Seat up/down rear